

## INSTRUCTION SHEET FOR SOLAR SHOWER

Thank you for choosing our solar shower product.

In order to use our products properly and get the most satisfaction and pleasure, please pay attention to the following details.

1. The solar shower must be installed on solid ground (concrete floor) or concrete base to make sure its stabilization and safety for user.
2. The solar shower is equipped with base plate, which has 4 prefabricated holes for screws installation.
3. Please install the solar shower at the location where has the most sunshine.
4. Please connect inlet of the solar shower to tap water system of your home. It is better to have the inlet of solar shower connected to your garden tap then to the tap water system.
5. Please pay attention that it is necessary to have a tap installed before the inlet of solar shower.
6. To prevent the scalding from the hot water, extra attention to the following. Before turn on the solar shower, please make sure the valve is at the cold water position (blue), then turn on the valve and gradually adjust the water toward the hot water position (red), until reach the most comfortable temperature.
7. Warning! Under the exposure of the very strong sun radiations, the water temperature coming from the solar shower may reach 60 °C or 140 °F.

Remark for off-season storage protection:

1. After the pool season, please clean the solar shower with soft cloth.
2. Please close the garden tap which is connected to the inlet of solar shower. And please make the cold and hot water valve in "OPEN" position, to make sure that all water in solar shower can be drained out from the shower head on top curved area.
3. While the solar shower is under the dry and frozen environment, the cold and hot water valve should be in "OPEN" position. The damage caused by frozen temperature will not be covered by our warranty.

Warning:

The damage caused by using mud water, salt water or frozen temperature will not be covered by our warranty.

