

Horizontal Privacy Panel









Assembly Instructions


Porchenzo


Horizontal Privacy Panel

Please read the following instructions completely before you begin assembly. Any errors made during installation are not covered by the product's warranty. If you have any questions during the installation process, please call us .










NECESSARY TOOLS AND SAFETY GEAR(NOT SUPPLIED)

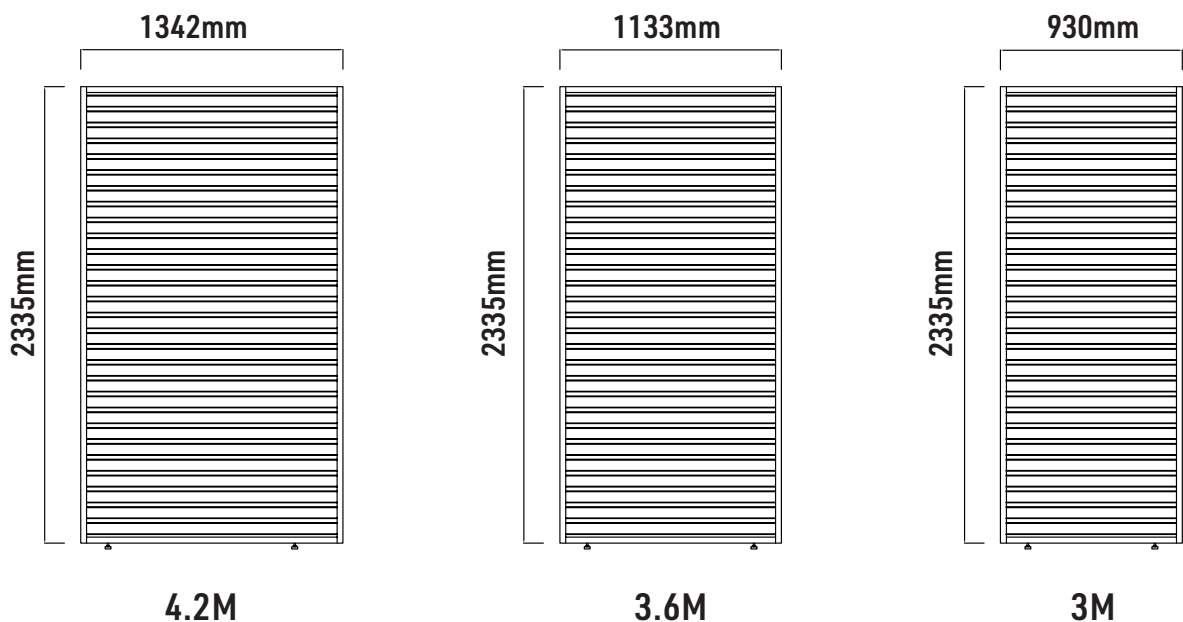

| | | | | |
|---|---|--|---|--|
| Goggles & Gloves  | Ladder  | Pistol drill  | Spirit level  | Utility knife  |
| Helmet  | Tape measure  | Monkey wrench  | | |



2D&3D FOOTING MEASUREMENT



CARTON 3M/3.6M/4.2M


| Reference | Parts | Quantity |
|-----------|---|----------|
| M1 |  | 1 |
| M2 |  | 1 |
| N1 |  | 1 |
| N2 |  | 1 |
| H1 |  | 2 |
| E1 |   | 1 |
| E2 |   | 27 |

| Reference | Parts | Quantity |
|-----------|---|----------|
| W1 |  3.9×25mm | 16 |
| W2 |  | 2 |

| Reference | Parts | Quantity |
|-----------|---|----------|
| W3 |  | 2 |
| W4 |  PH2 | 1 |



STEP 1

Please first detach the edging strips(**H1**) from the two side frames(**W1 & W2**) of the privacy panel.

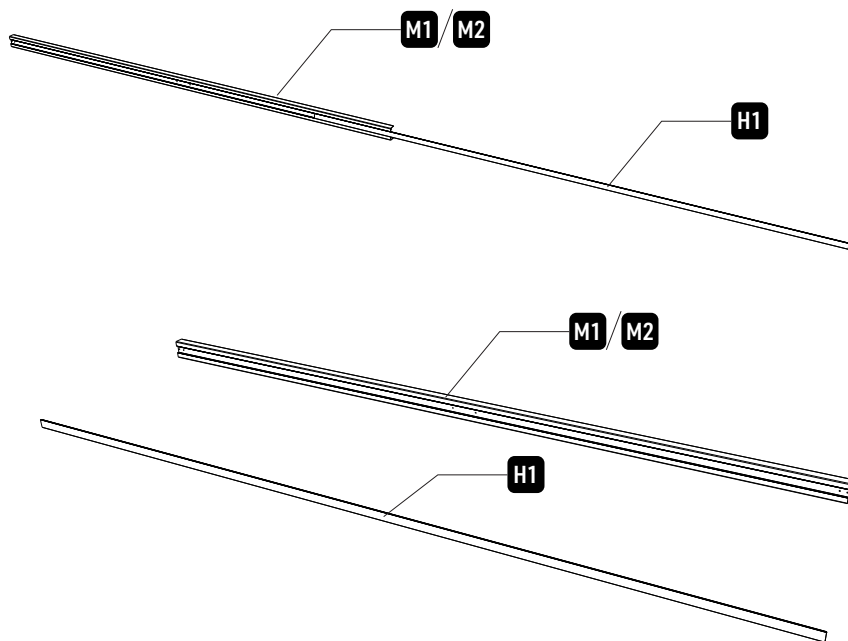


STEP 2

- Pick out the longest louver(**E1**) from all louvers.
- Find the hole on the side frame of the privacy panel, then insert the **E1** into the corresponding location shown in the diagram as below.

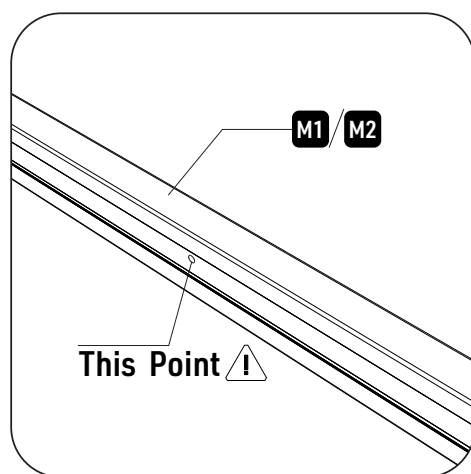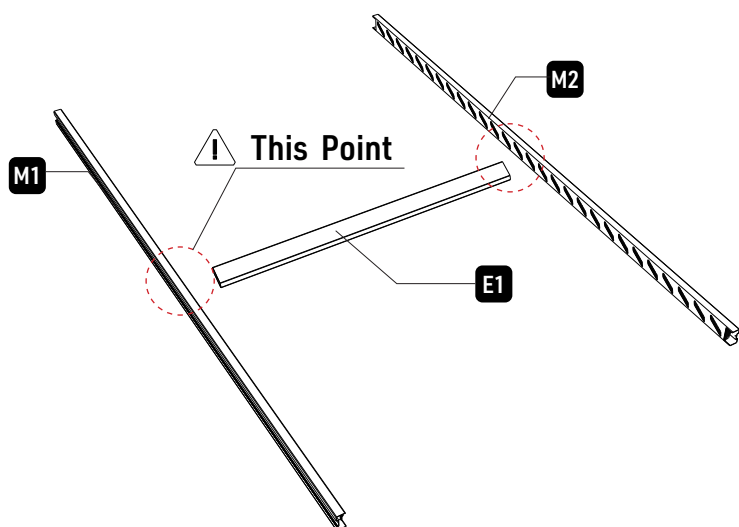


STEP 3

After inserting the **E1**, please use the screw(**W1**) to fix the two ends of **E1** onto the frame.

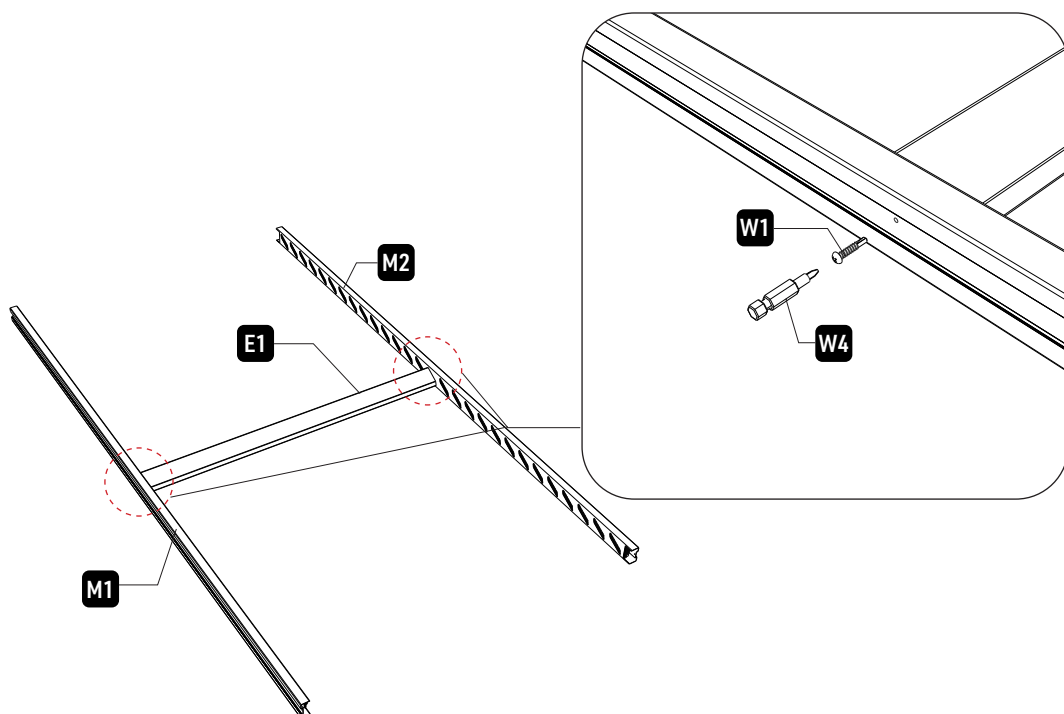


STEP 4

Install the upper and lower frame according to the diagram below, and fix the frame by using two screws on each side.

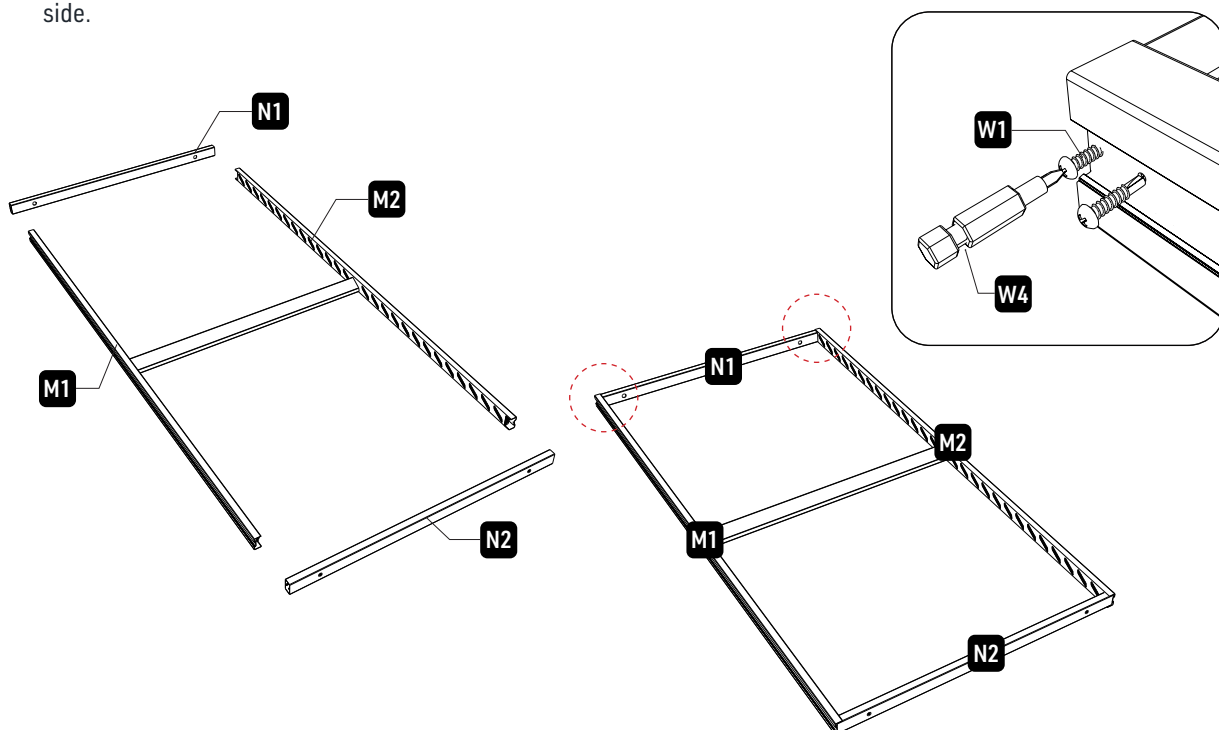


STEP 5

Install the adjustable base under the bottom frame , please note that do not screw the adjustable base too tight.

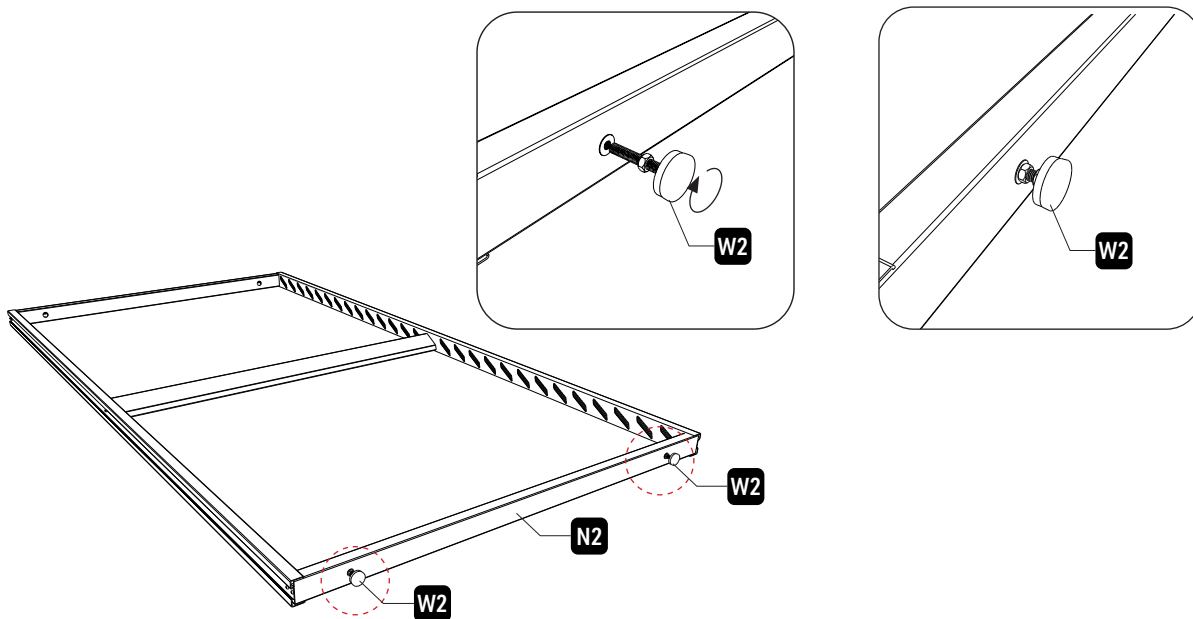



STEP 6

Insert back the two edging strips(H1) into the two side frame.

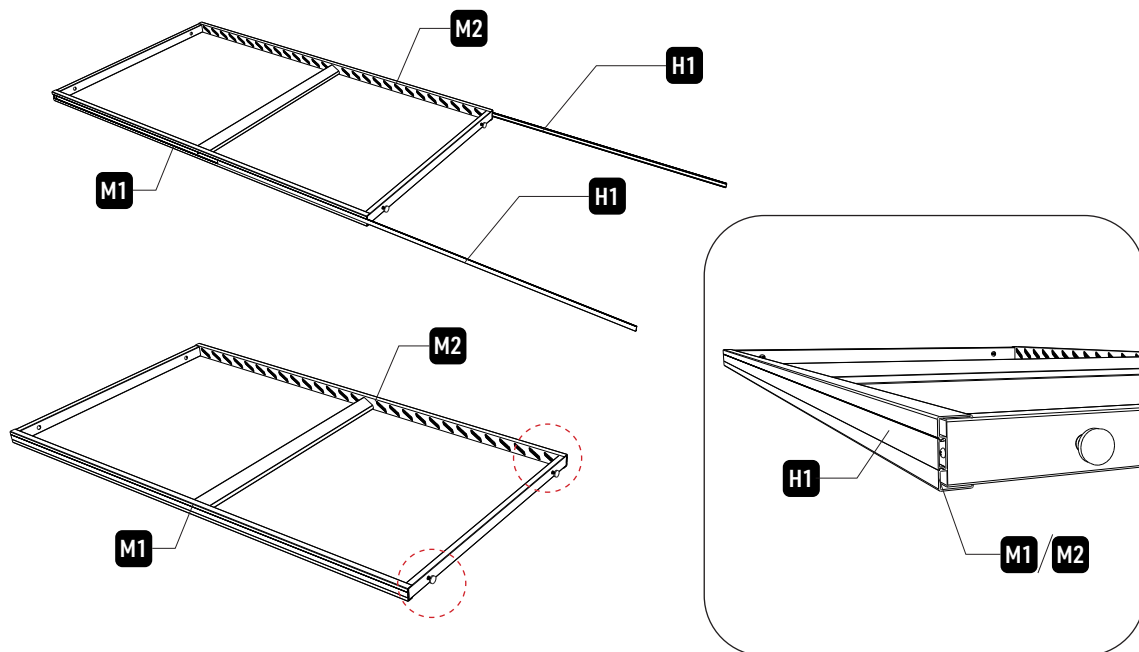


STEP 7

- Place the privacy panel under the pergola as the diagram shows below.
- Attention! The privacy panel should be aligned with the outer side of the beam.

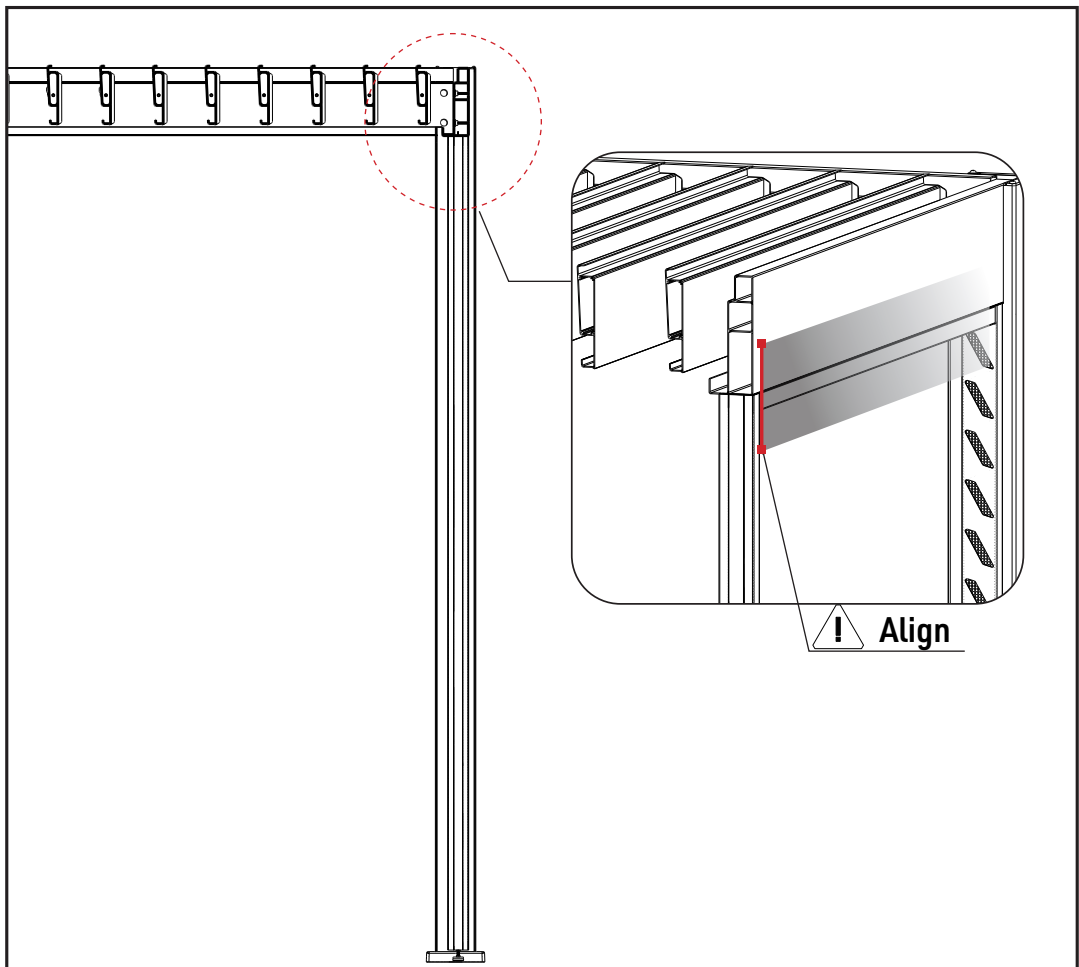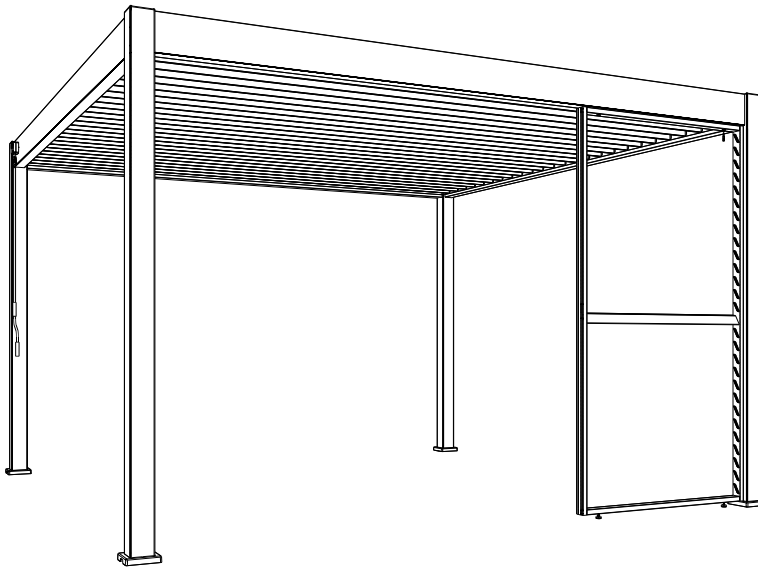


STEP 8

Adjust the adjustable bases again to make sure they just stand on the ground.

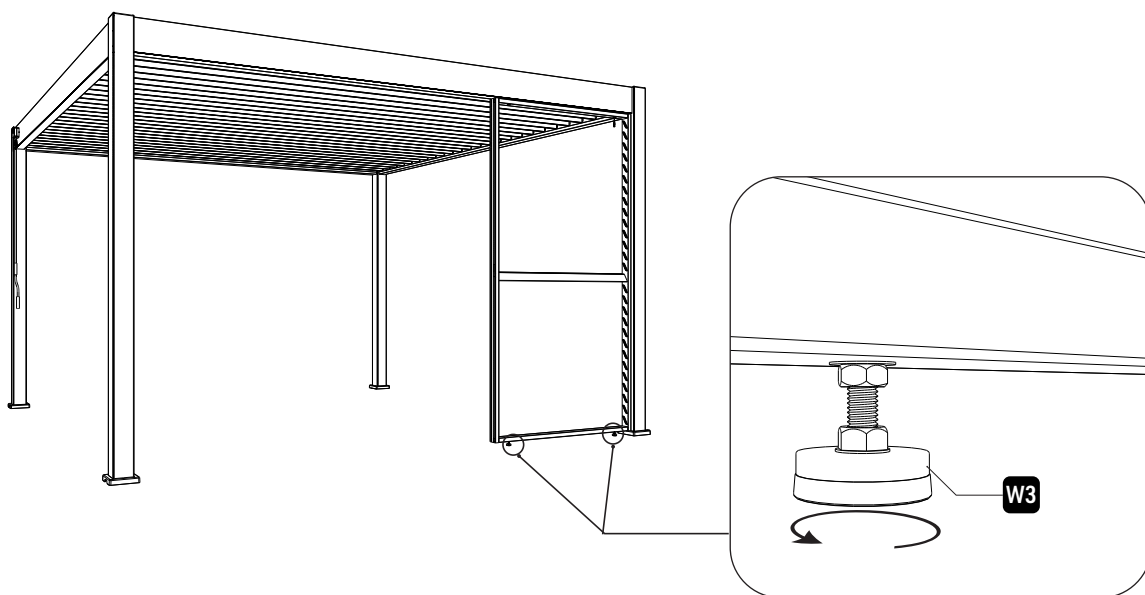




STEP 9

Please use the screw (**W1**) to fix the privacy panel frame with the post as the diagram shows below.

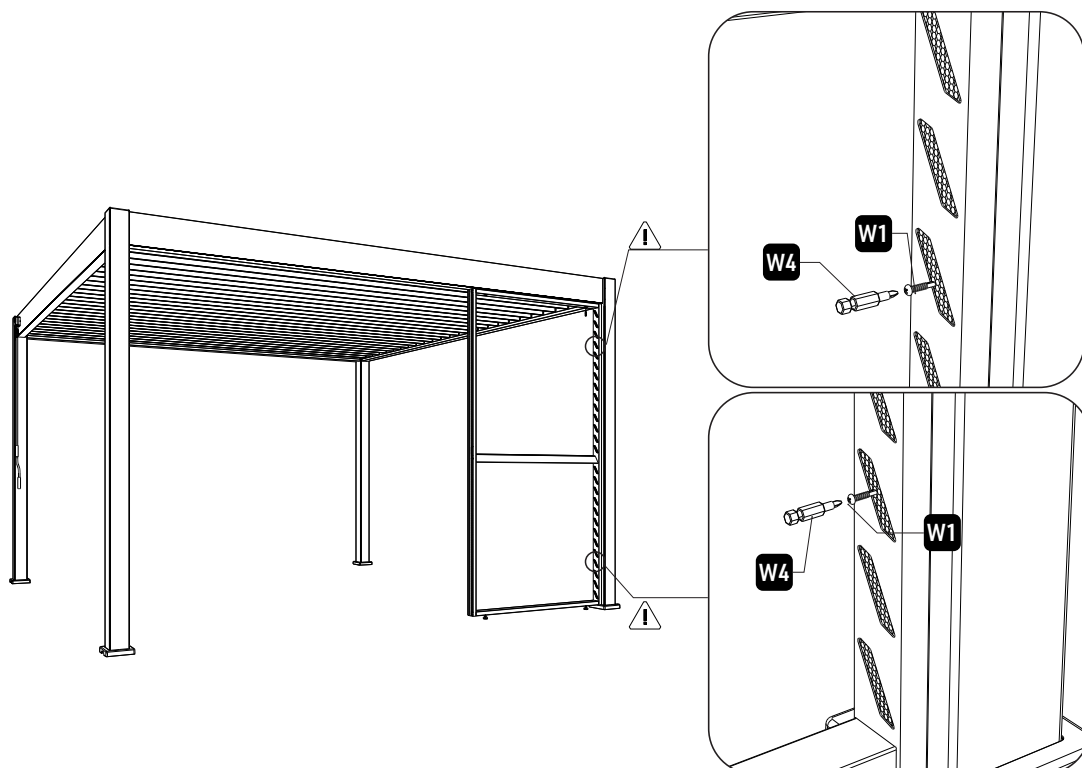






STEP 10

Fix the upper frame of the privacy panel by using screws(W1), then cover the hole with plastic caps(W3).

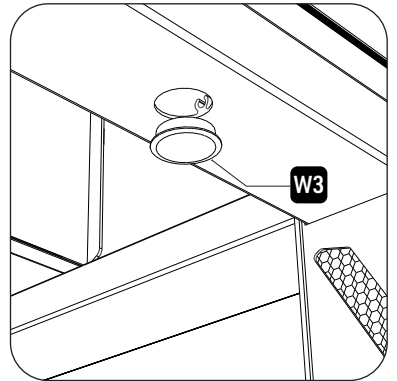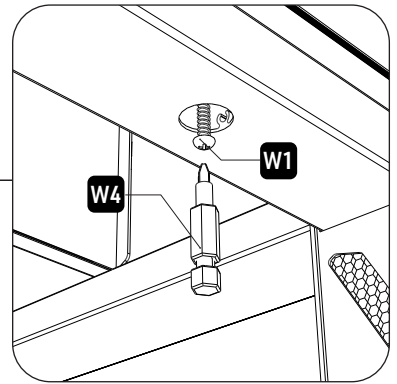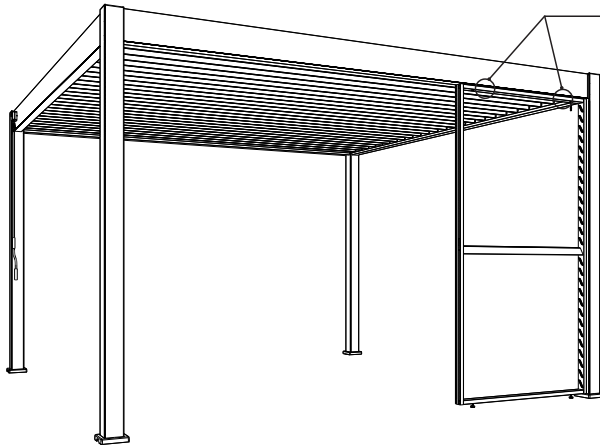

STEP 11


To install these short louvers, please press one end into the sponge, then insert the other end.

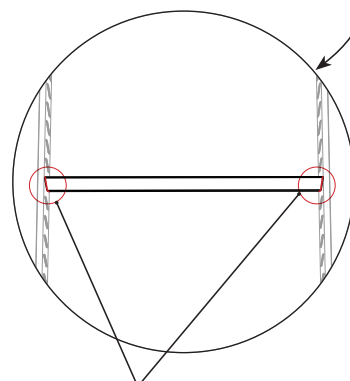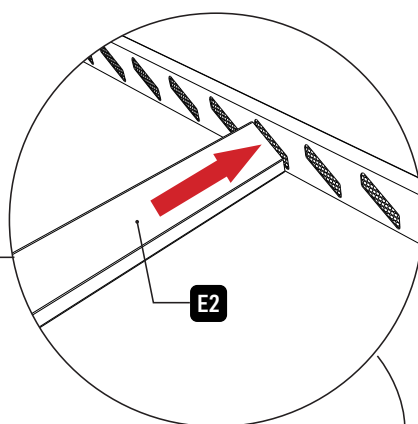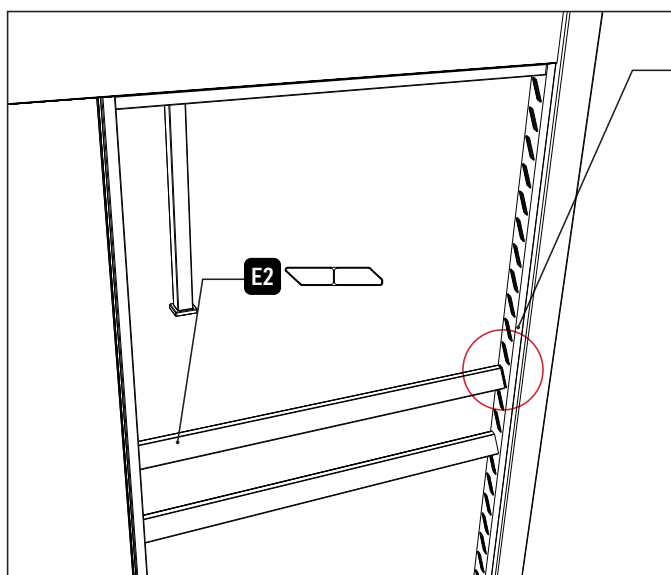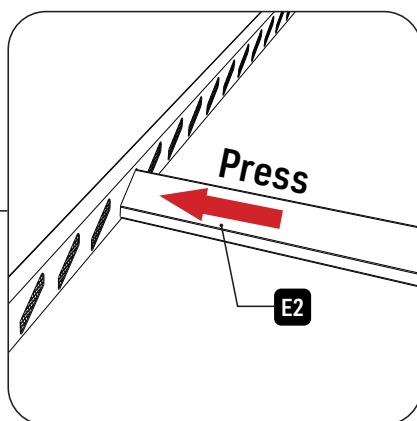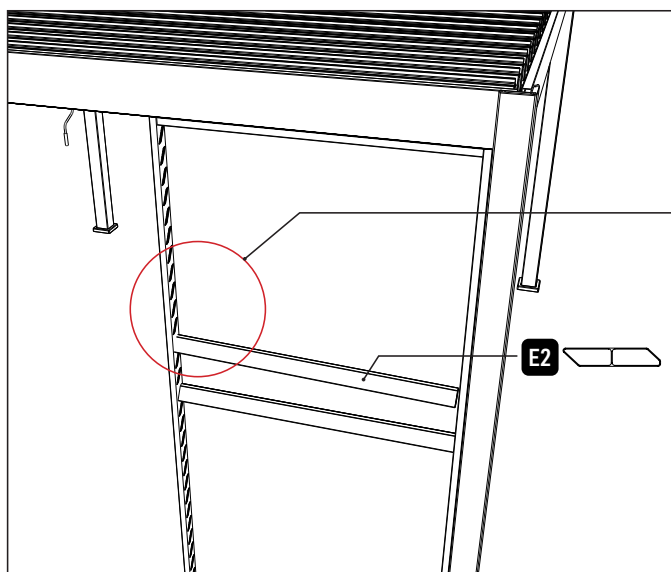

Stuck In Sponge

ADD+1

When installing two privacy panels, please repeat the same installation steps as above.

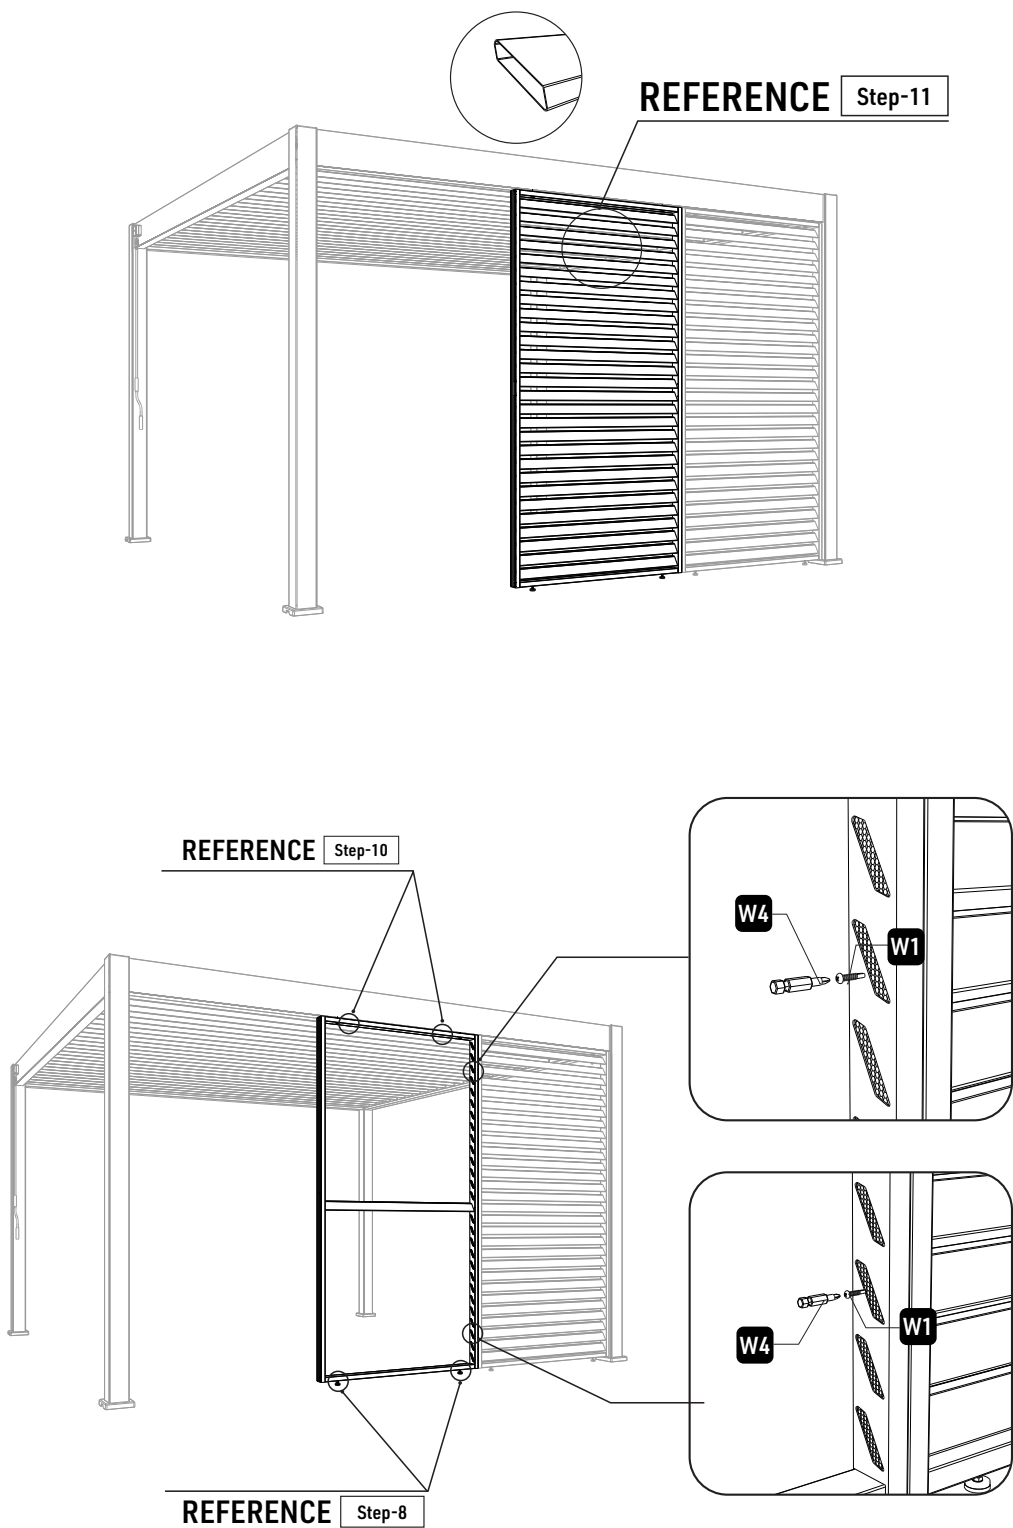

ADD+2

When installing three privacy panels, please repeat the same installation steps as above.

Just remember when there is any connection, you always need to fix the privacy panel frame according to step 9.

