
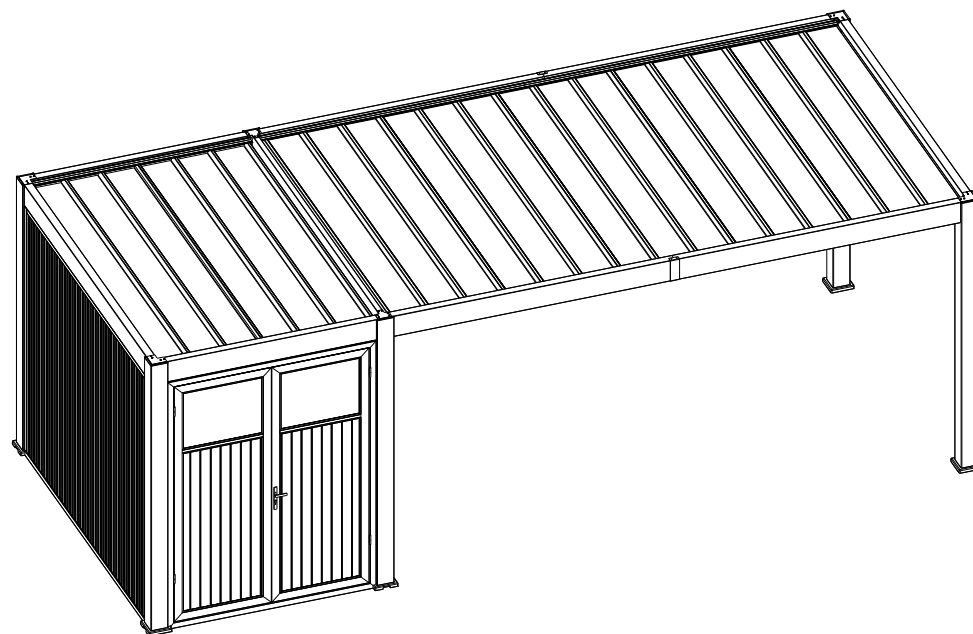


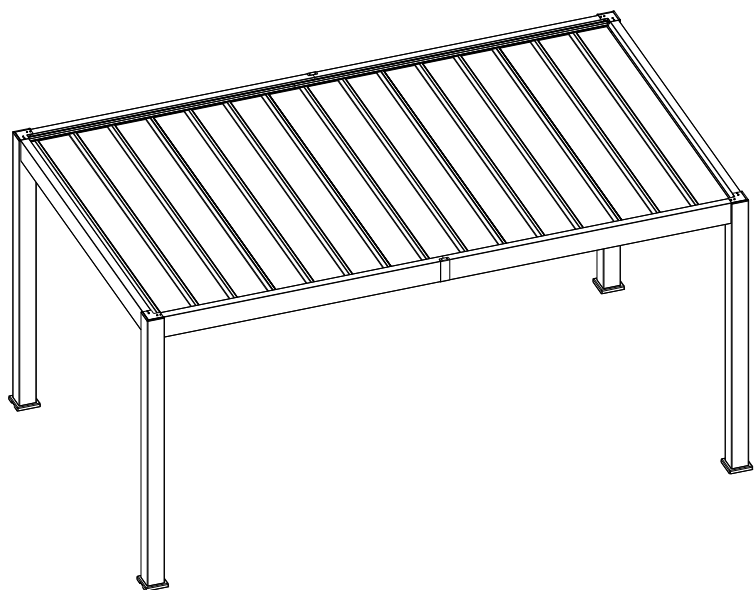


CARPORT + STORAGE



Assembly Instructions

Carport Spare Part List A

Frame

REF	PICTURE		QTY
A1		 150X150-2550	4
D1		 120X195-2517.5	2
D2		 120X195-2517.5	2
B2		 120X195-2910	2
F1		 25X45-2494	4

Roof Panel

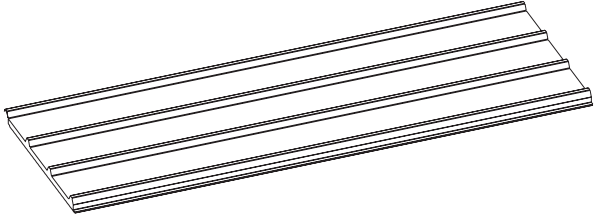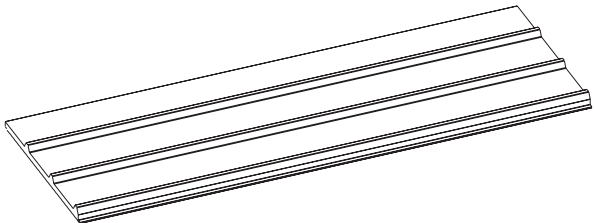REF	PICTURE		QTY
W1		 2895-1080	4
W2		 2895-1023	1


Connector

REF	PICTURE	QTY
N1		4
N2		4
N3		2
N4		4

Plastice Spare Part


REF	PICTURE	QTY
P1		16
P2		42

Tools

REF	PICTURE	QTY
Z1	 4mm	1
Z2	 4mm	1
Z3	 6mm	1
Z4	 6mm	1


Screws

REF	PICTURE	QTY
S1	 6mm	16
S2	 6x35 4mm	16
S3	 5x19	40
S4	 5x100	30
S5	 4x16	4
S6	 10x80	16



REF	PICTURE	QTY
Z5	 PH2	1
Z6		1
Z7		1

Carport Spare Part List B

Frame

REF	PICTURE		QTY
A2		 150X150-2550	2
B3		 120X195-1929	2
E1		 120X195-2910	1
F2		 25X45-1910	2
K1		 32X40-2701	2
K2		 32X40-2323	3
K3		 32X40-1719	1
K4		 40X60-2790.	2
K5		 40X60-1809	1
K6		 34X50-2323	3
K7		 6X50-2323	3

Roof Panel

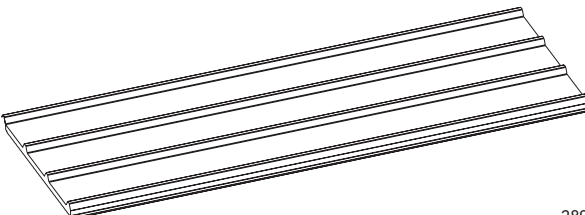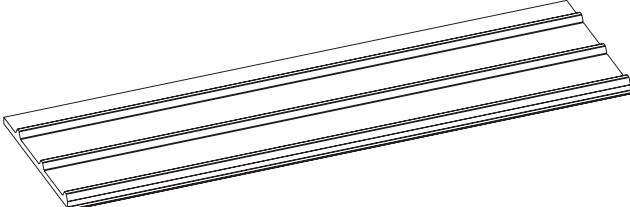REF	PICTURE		QTY
W1		 2895-1080	1
W3		 2895-932	1

Composite Wall Panel

REF	PICTURE		QTY
L1		 188X28-2316	39
L2		 100X28-2316	2
L5		 180X28-2316	1

Parts

REF	PICTURE		QTY
V1		 90X18-2790	2

Carport Spare Part List B


Connector

REF	PICTURE	QTY
N1		2
N2		2
N5		2



Plastice Spare Part

REF	PICTURE	QTY
P1		24
P2		15


Screws

REF	PICTURE	QTY
S1	 6mm	8
S2	 6x35	8
S3	 5x19	15
S4	 5x100	12
S5	 4x16	64
S6	 10x80	8
S7	 4x60	12
S8	 8x100	15

Door

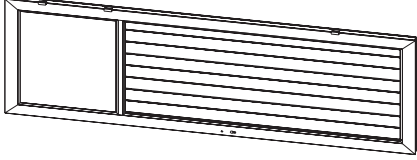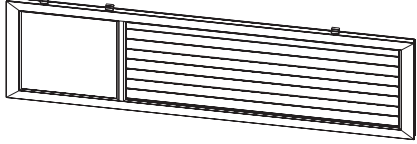
REF	PICTURE	QTY
M1		1
M2		1
M3		1
M4		1
M5		1
M6		1
T1		4
T2		4
T3		1
T4		1

NECESSARY TOOLS AND SAFETY GEAR (NOT SUPPLIED)



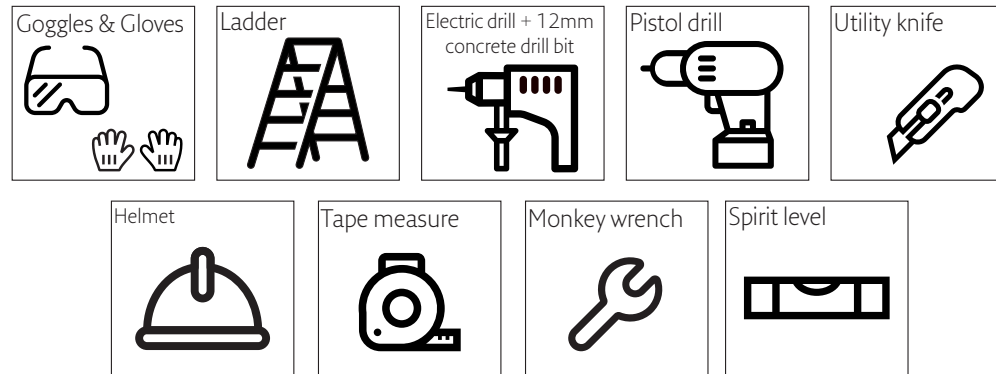


These instructions have to be saved during the whole product life cycle. We advise you to read these very carefully before proceeding to the assembly. The user will be reliable for any damages or injuries caused due to incorrect or improper installation.





There is a Product Tracking Number in the inner side of the carton(see below diagram). For better and efficient after-sales in the future, when tear down the carton box, please take a photo of the Tracking Number and save the photo.

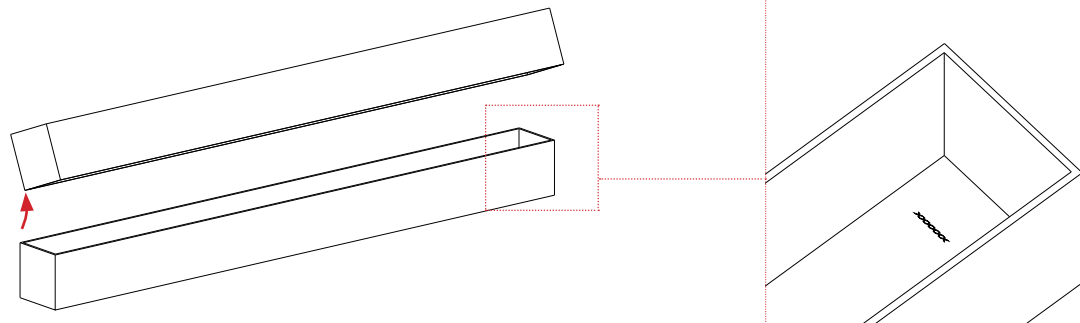

Carport Spare Part List A



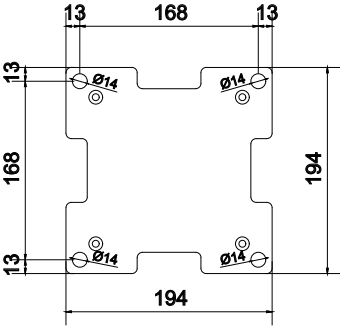
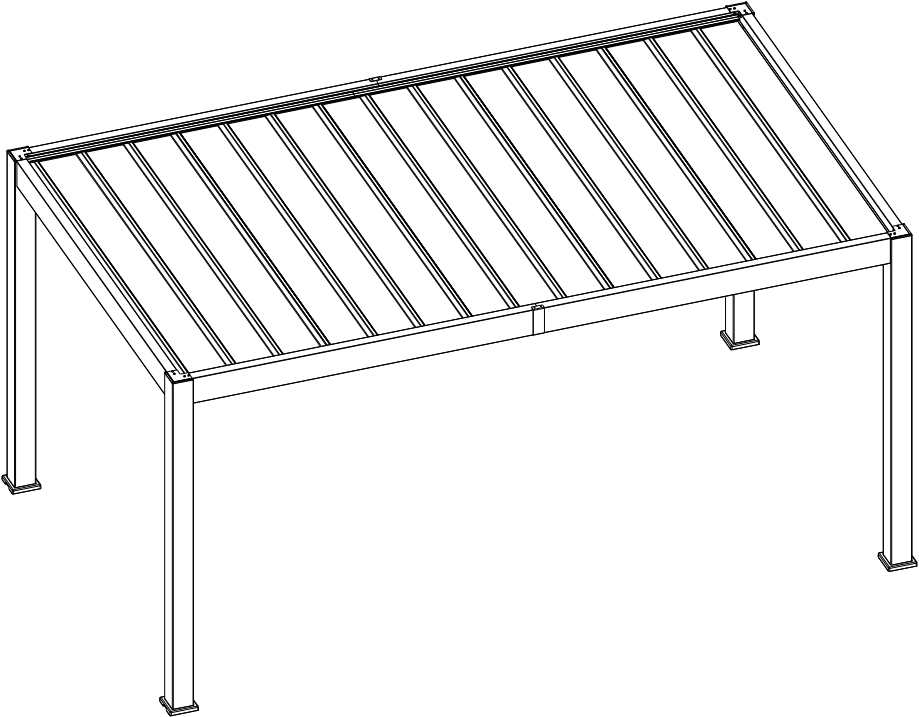
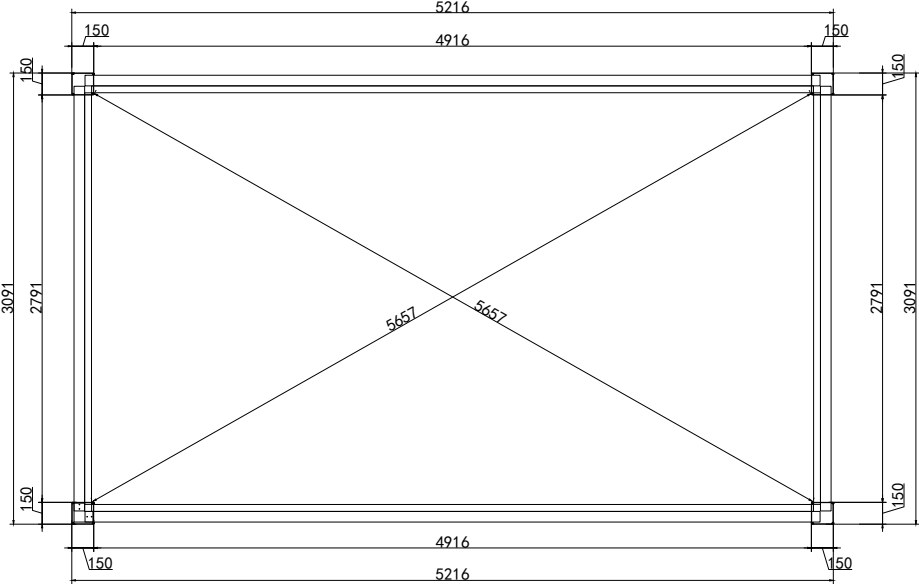


Carport Spare Part List A+B

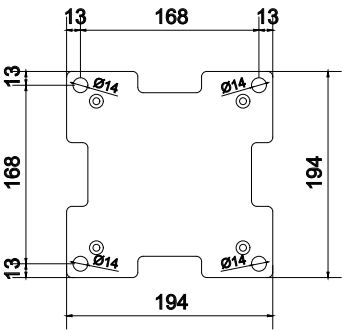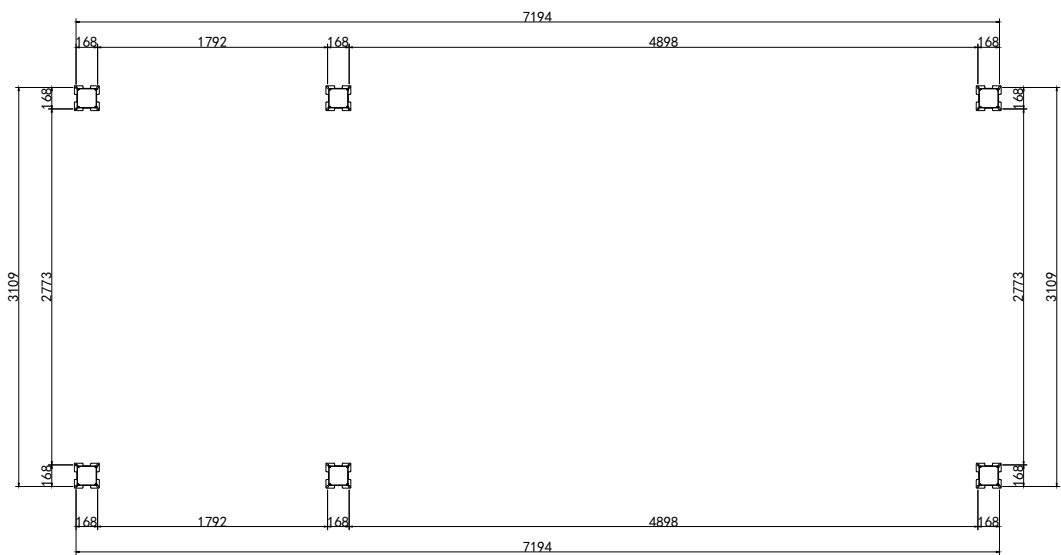
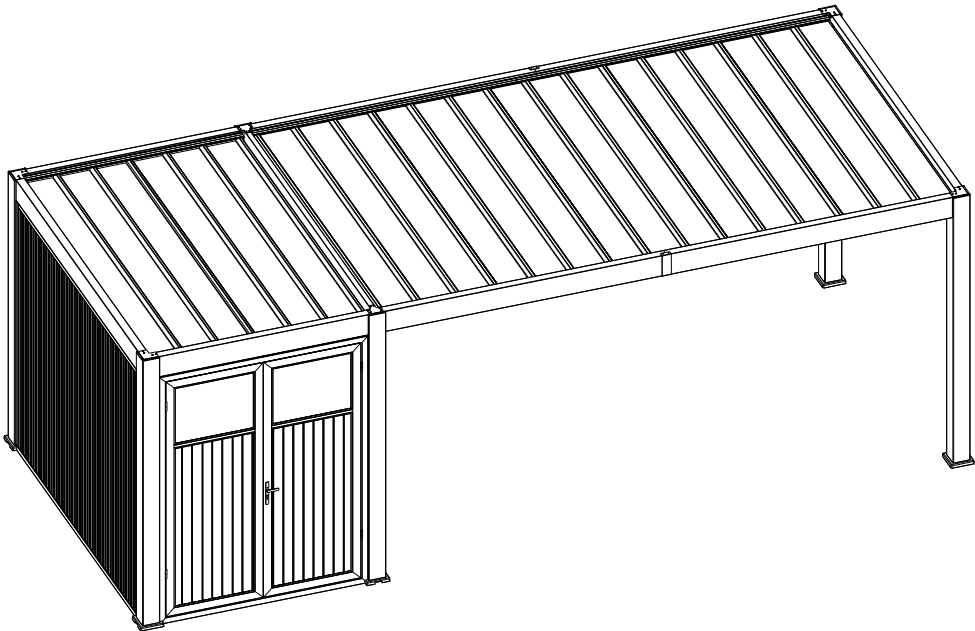
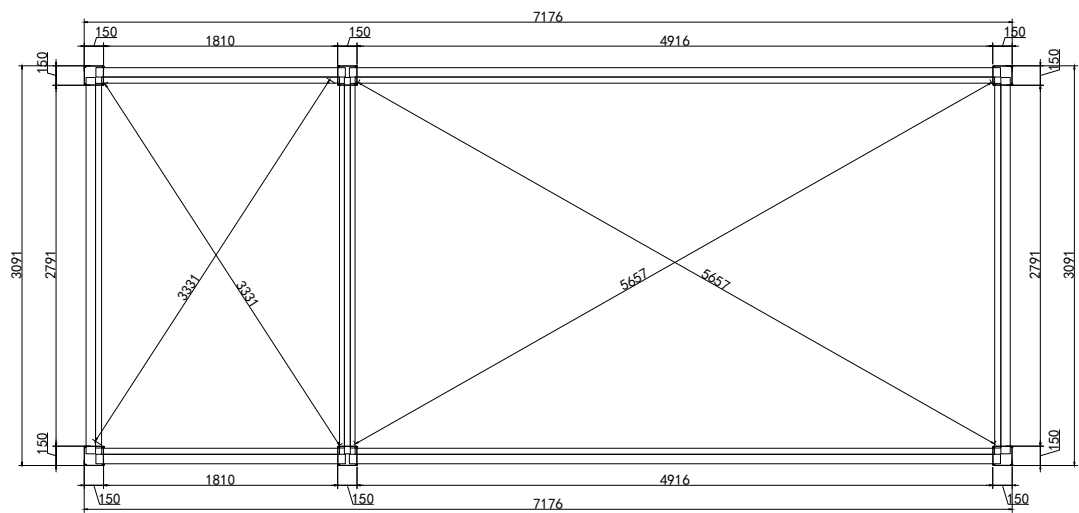


Combination A

S3	 5×19	12
S5	 4×16	4
N3		2


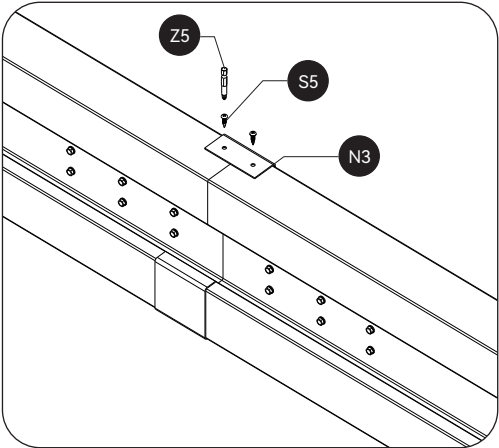
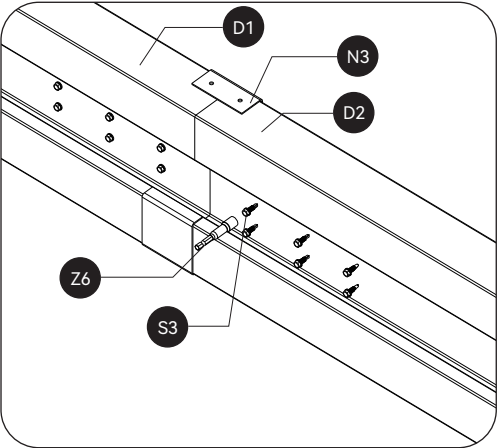
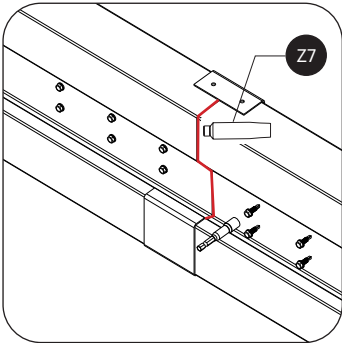
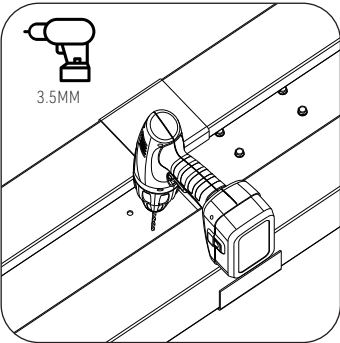
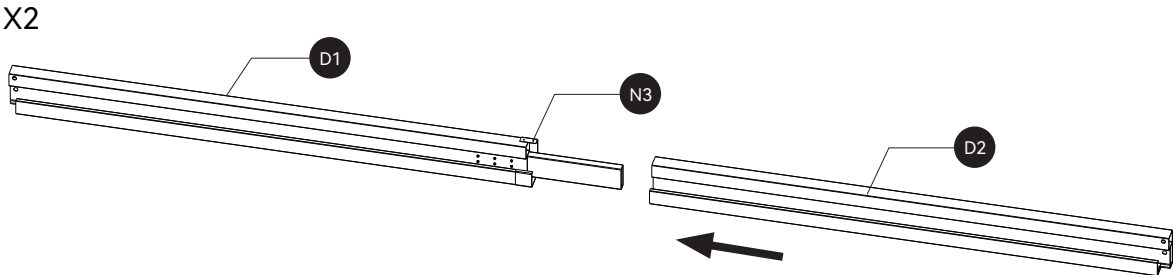


S2	 6×35	16
N1		4
N2		4

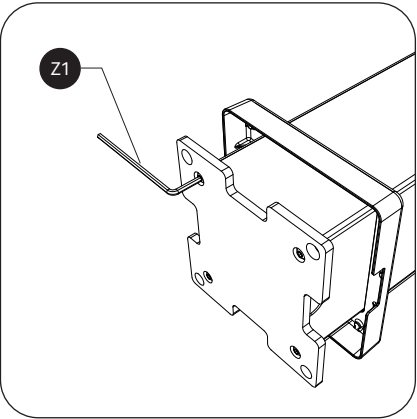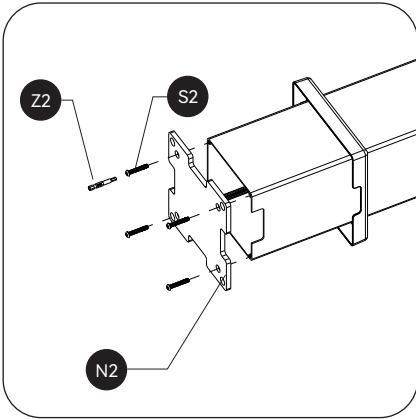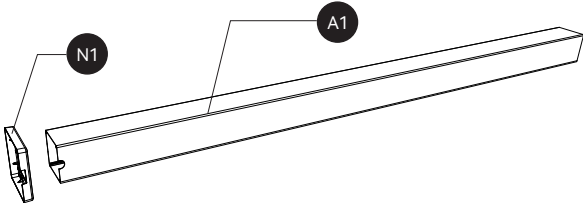





Combination A

S1		16
----	---	----

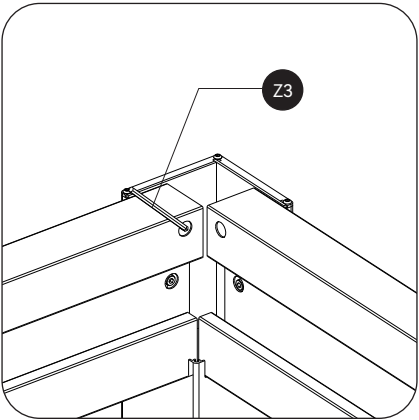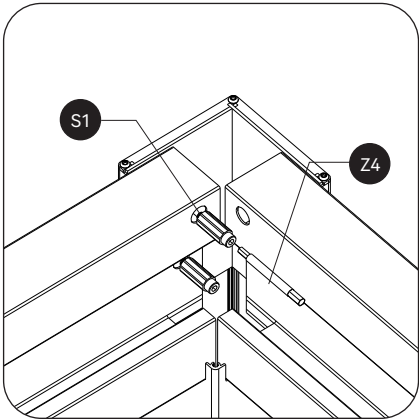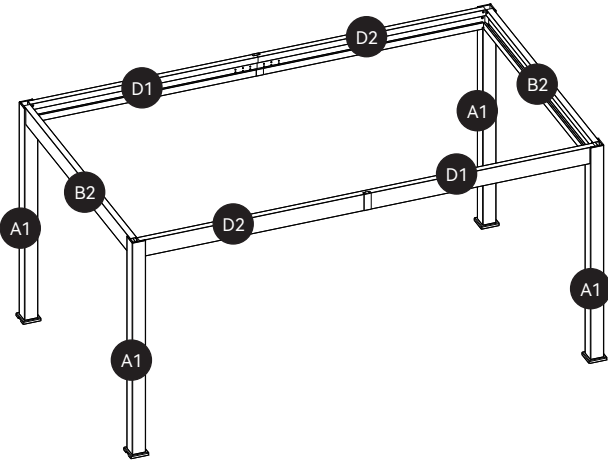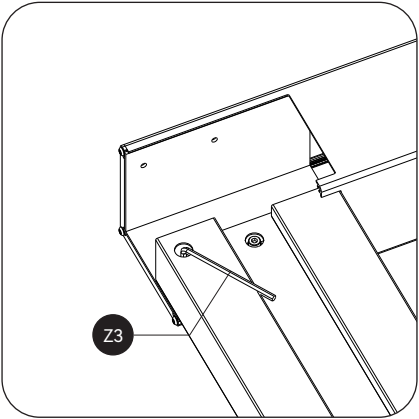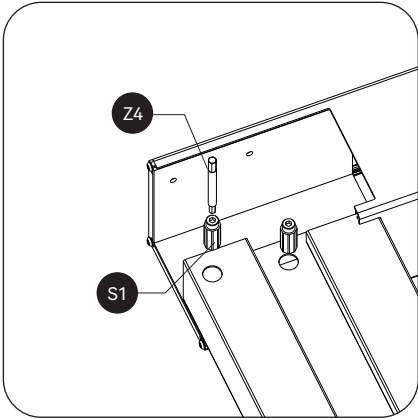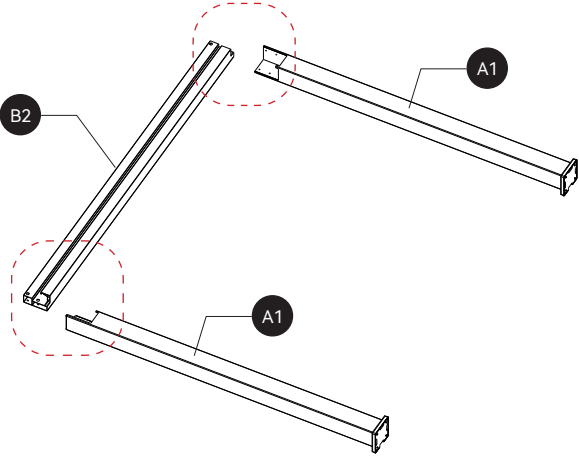










Combination A

P1		16
S3	 5x19	16
N4		4

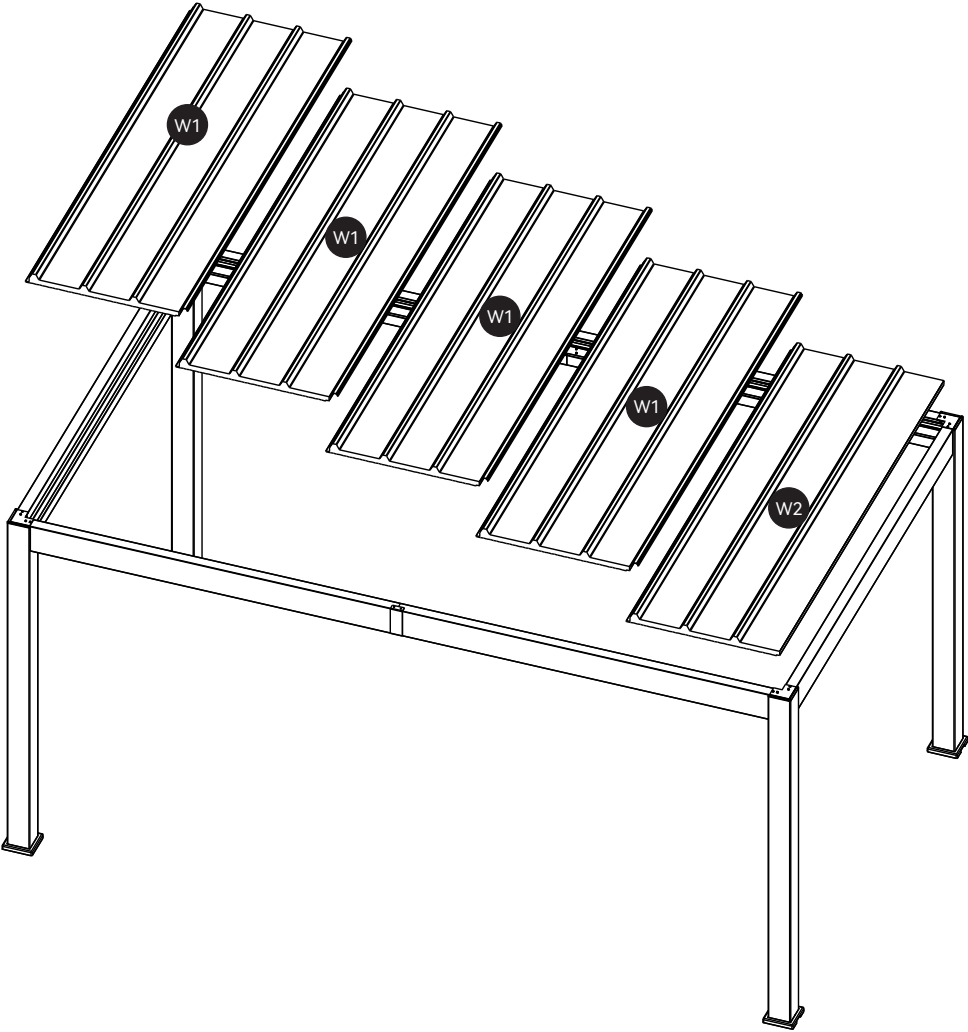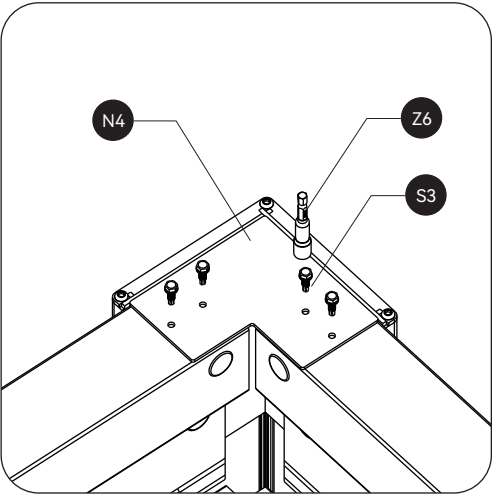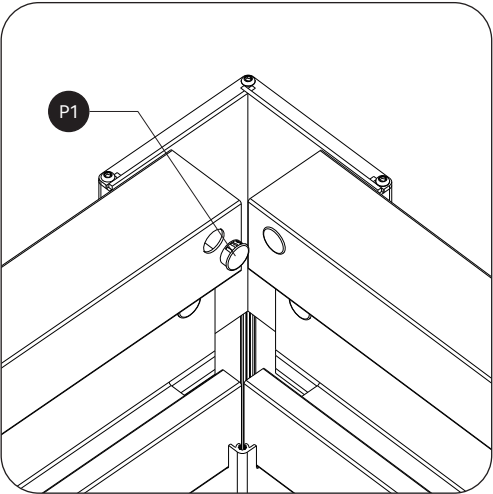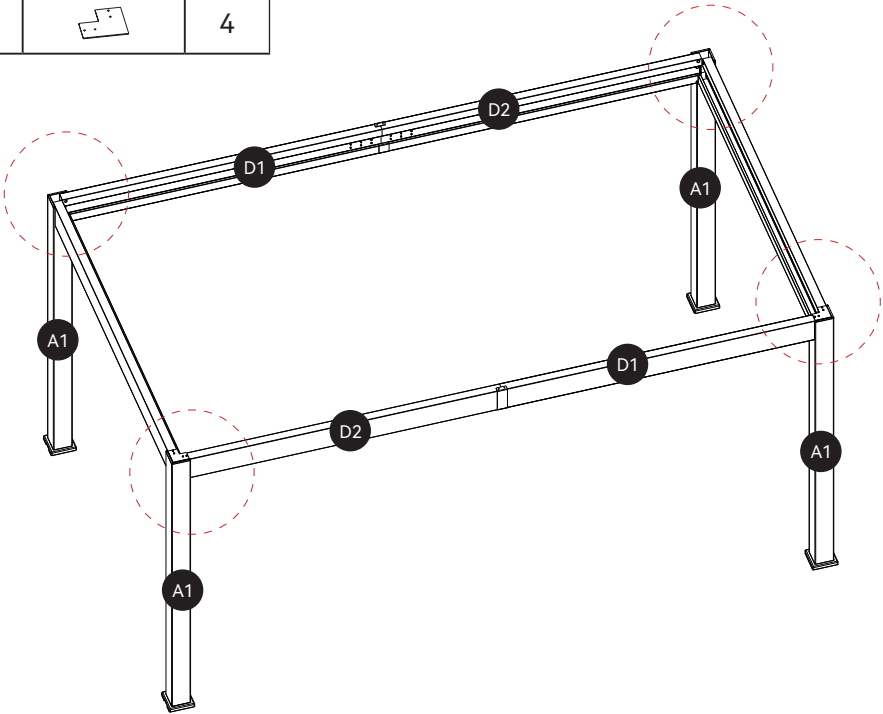





Combination A

P2		30
S4		30

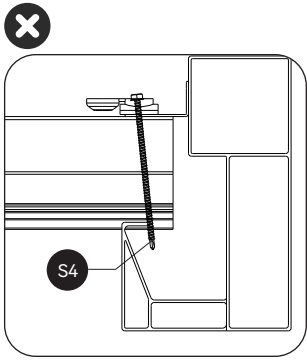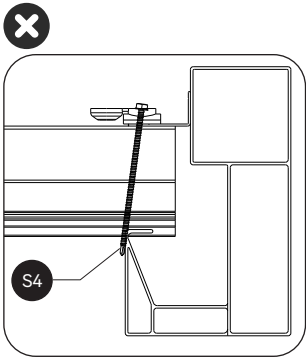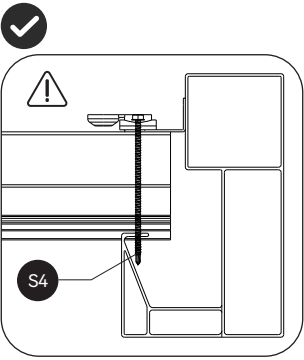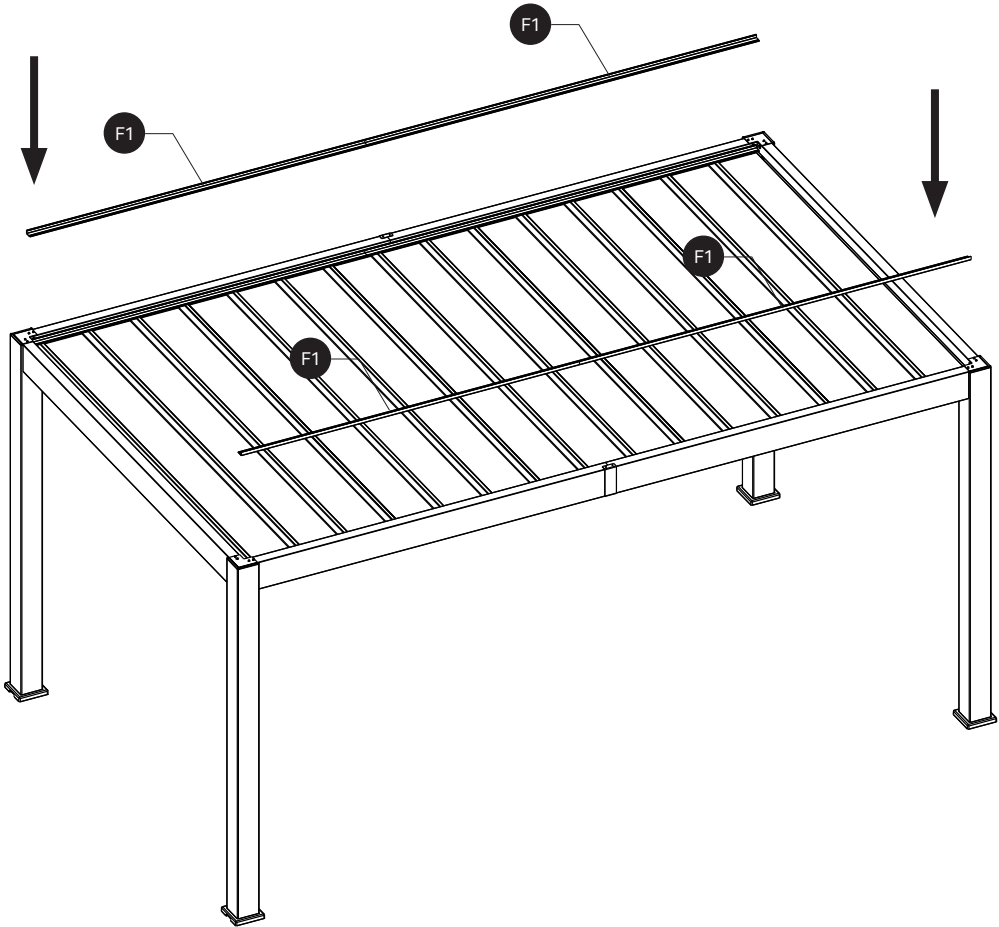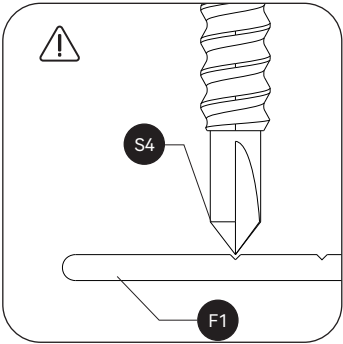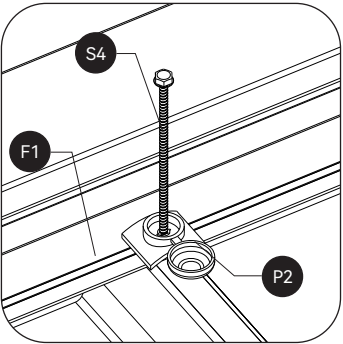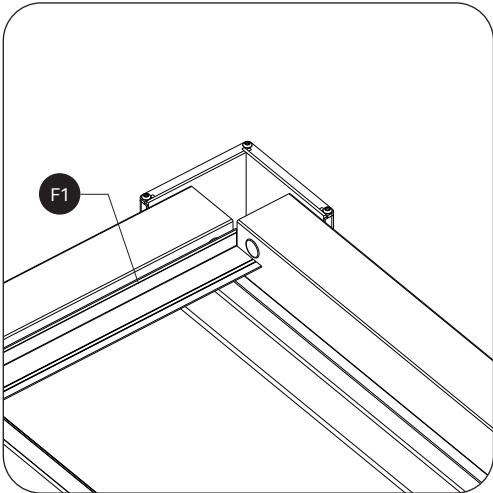
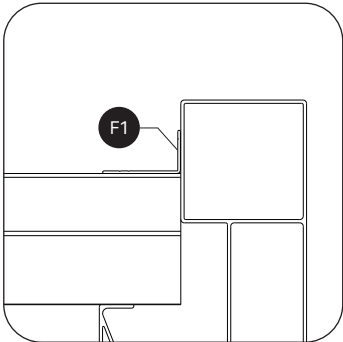
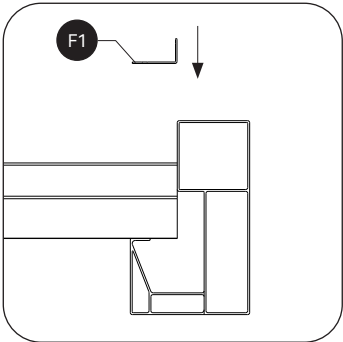


Combination A

S3	 5x19	12
P2		12

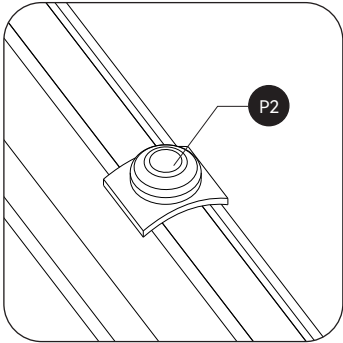
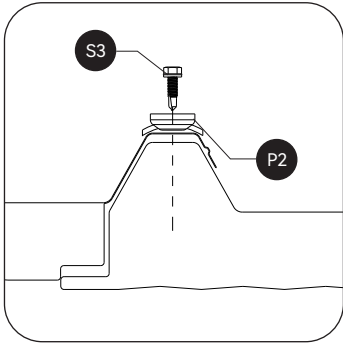
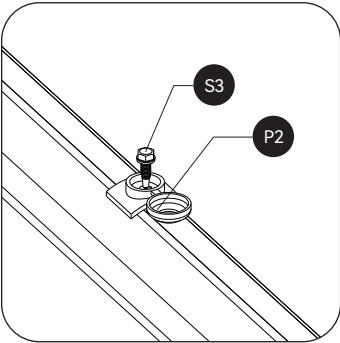
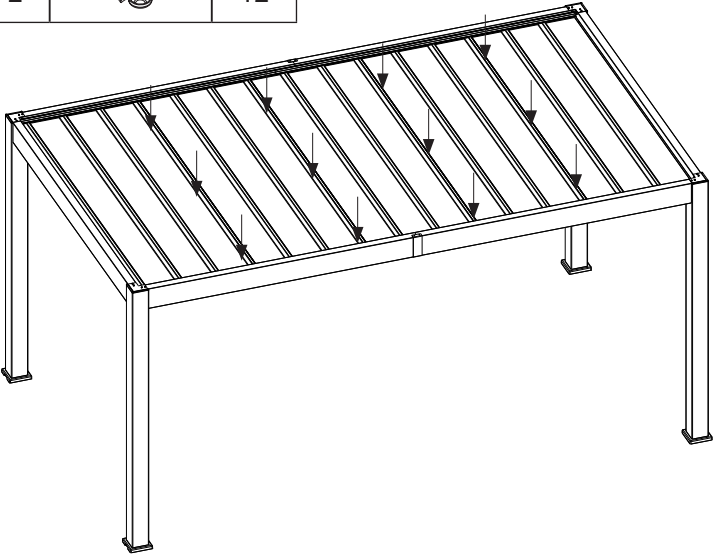


S6		16
----	---	----

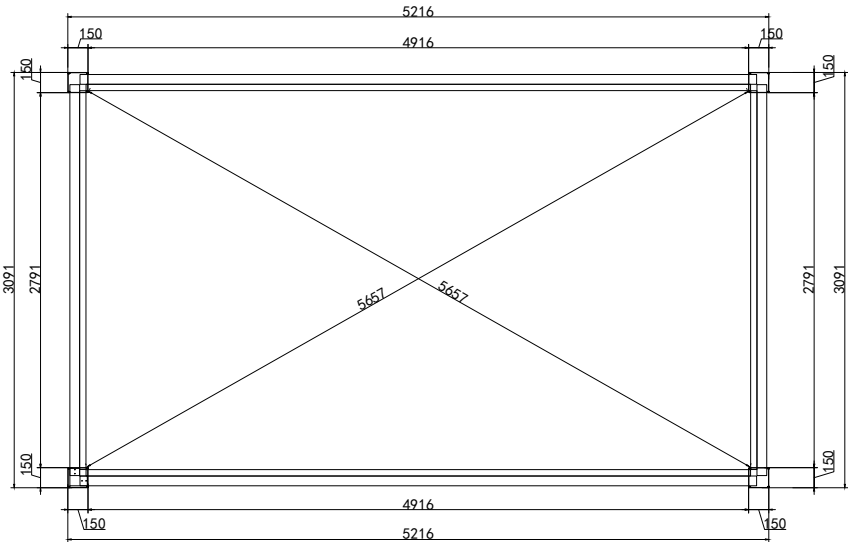
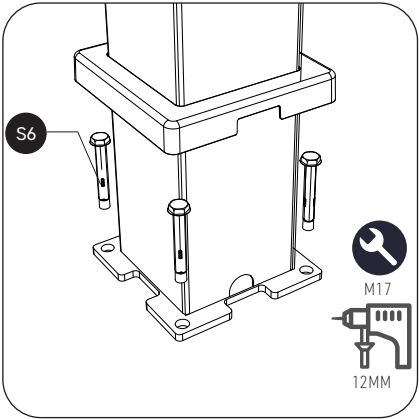
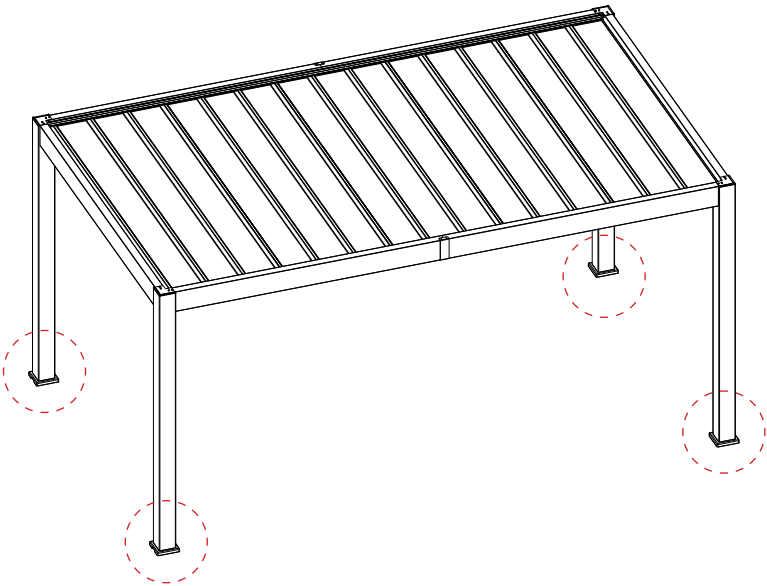


Combination A+B

S3	 5×19	12
S5	 4×16	4
N3		2






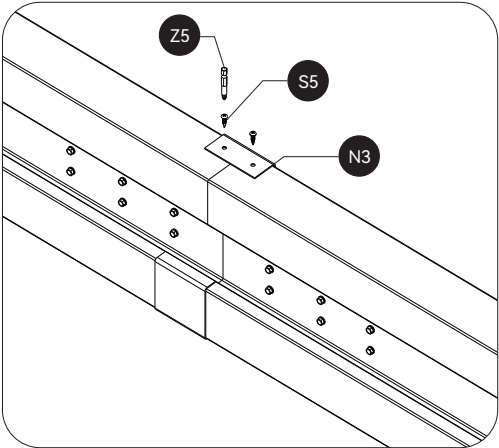
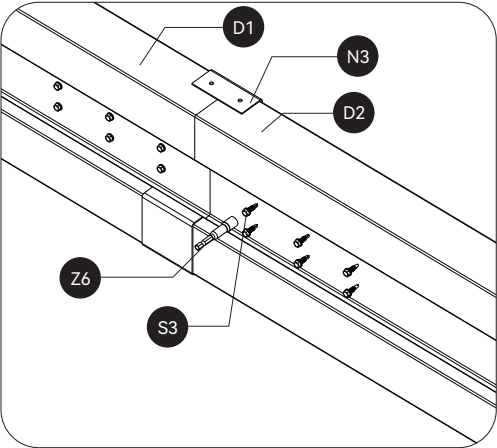
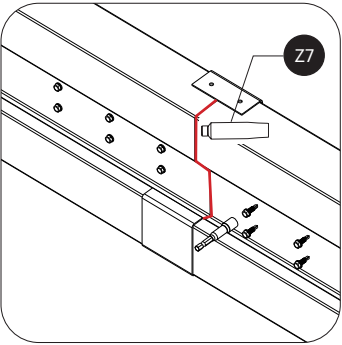
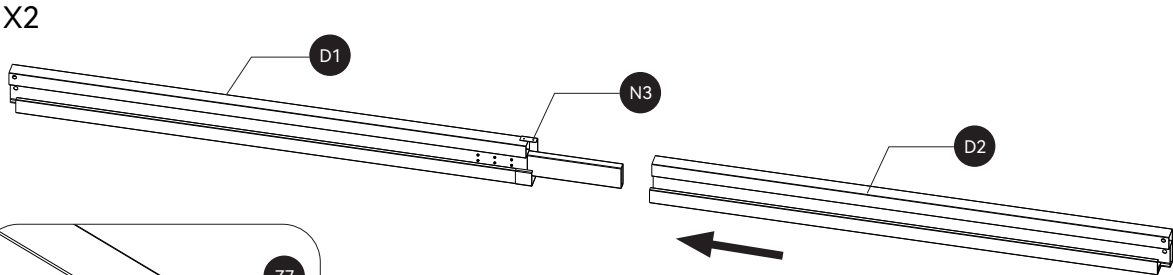


S2	 6×35	24
N1		6
N2		6

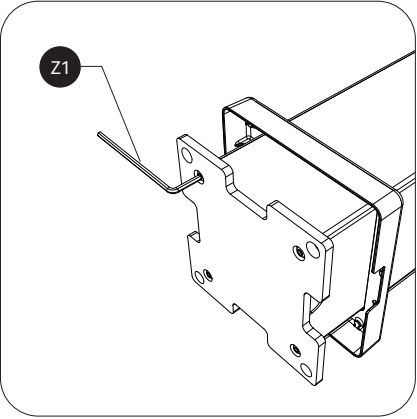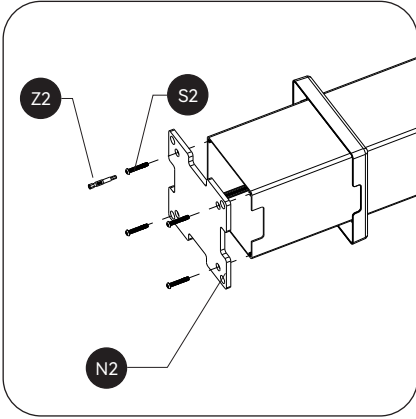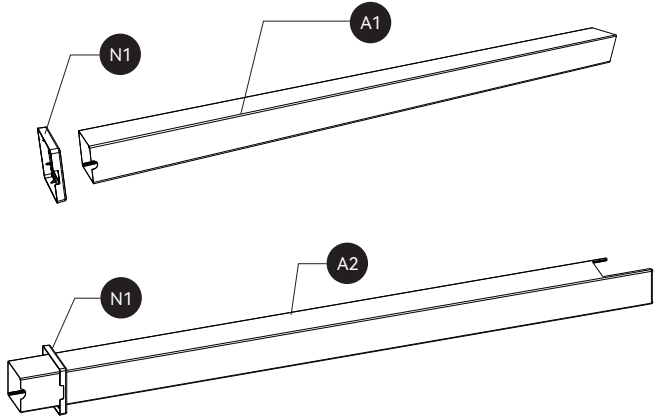

Combination A+B









S1		24
----	---	----

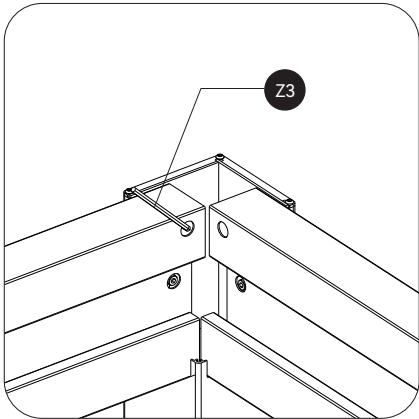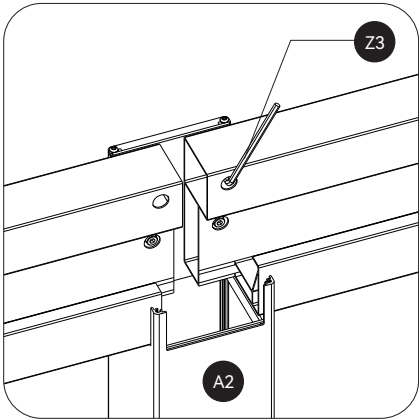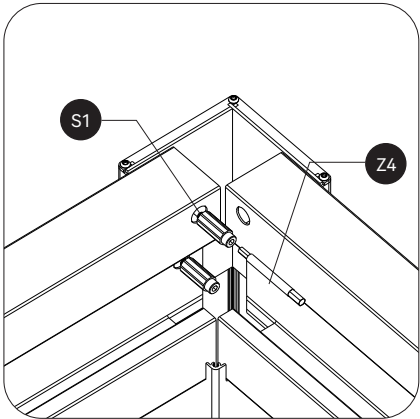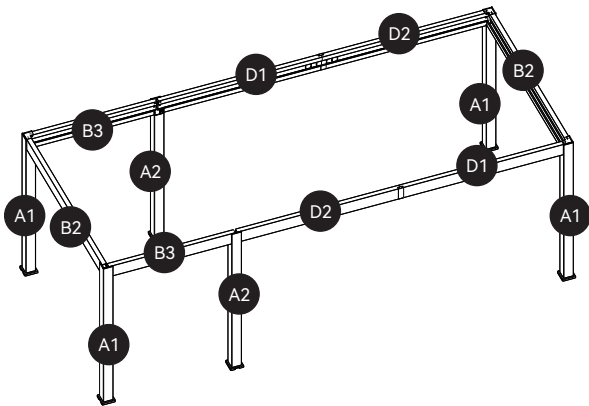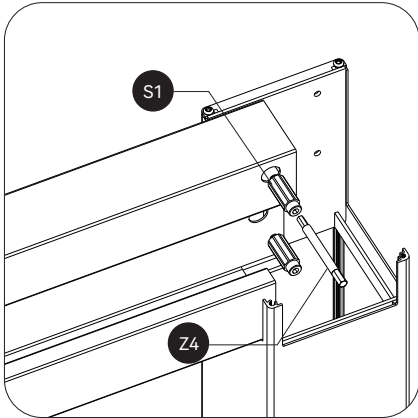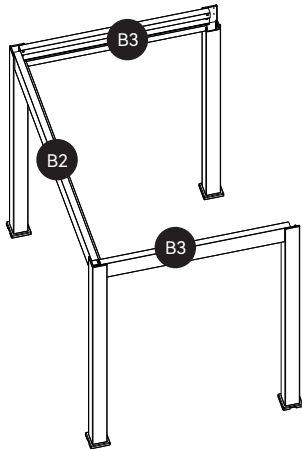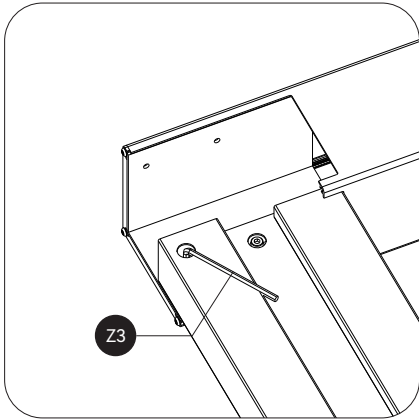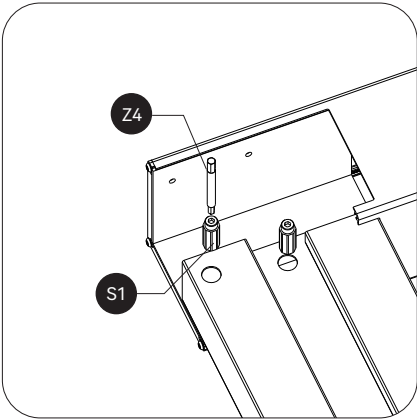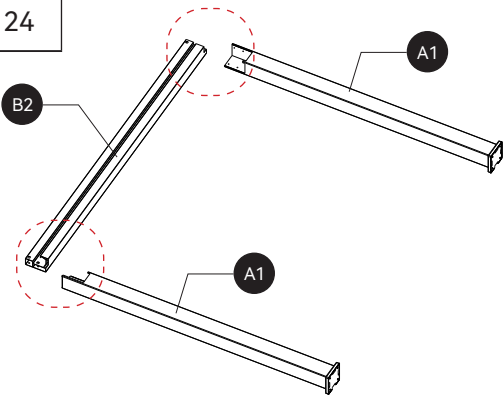

Combination A+B










S3	 S3	28
N4		4
N5		2

P1		24
----	---	----

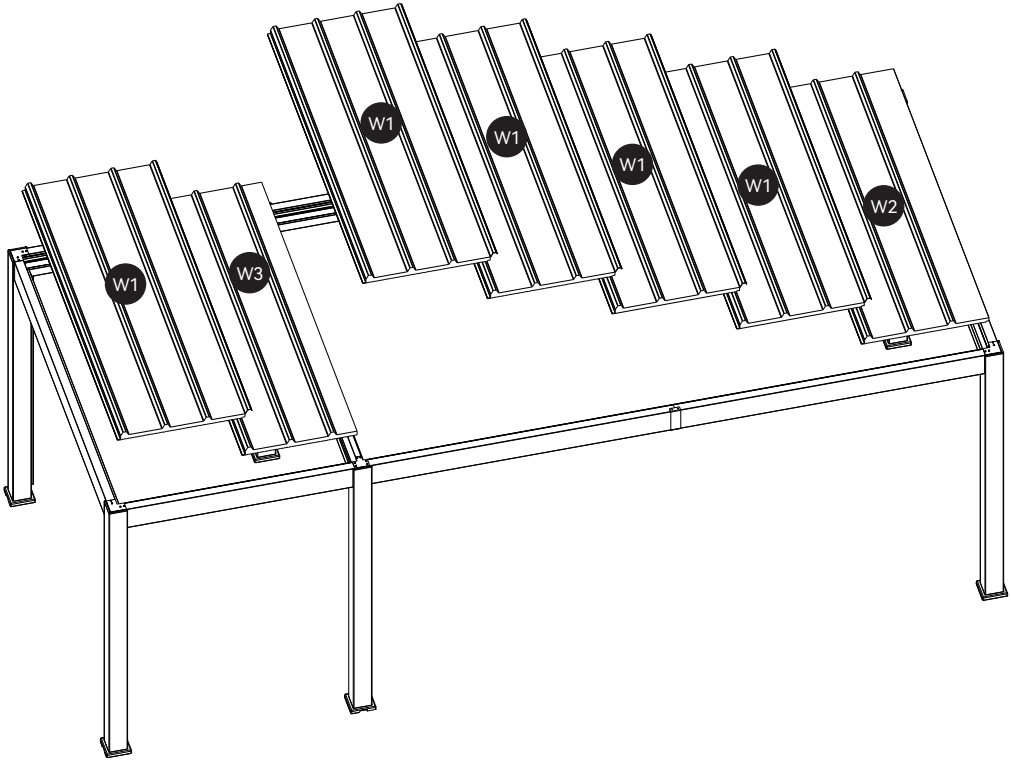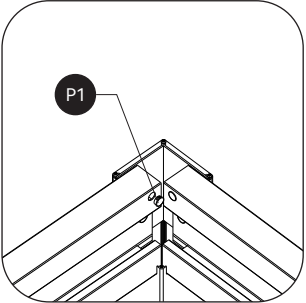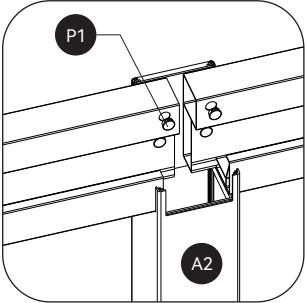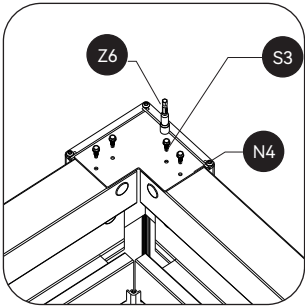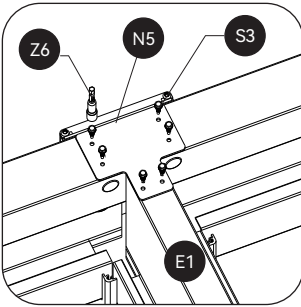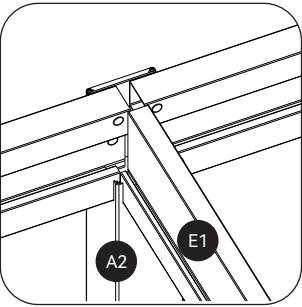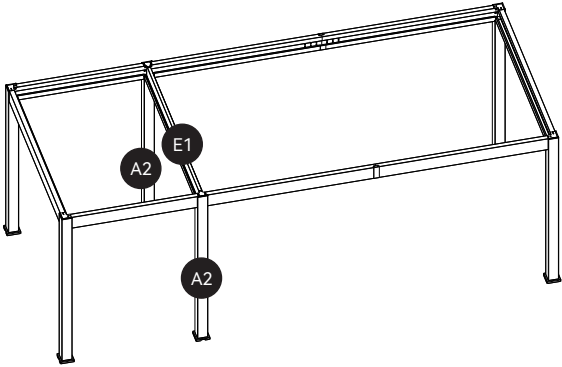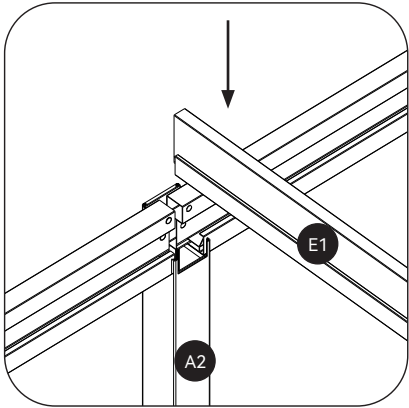





Combination A+B

P2		42
S4		42

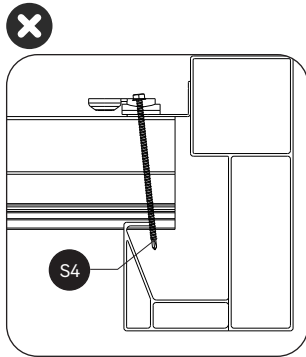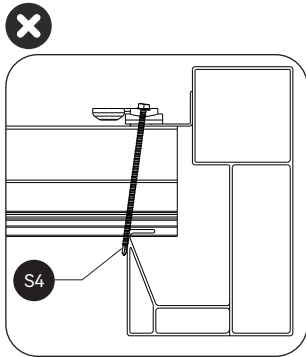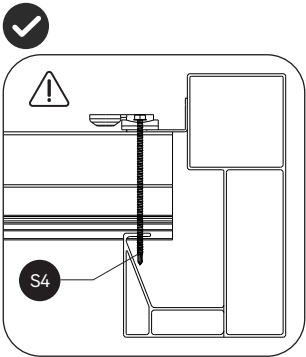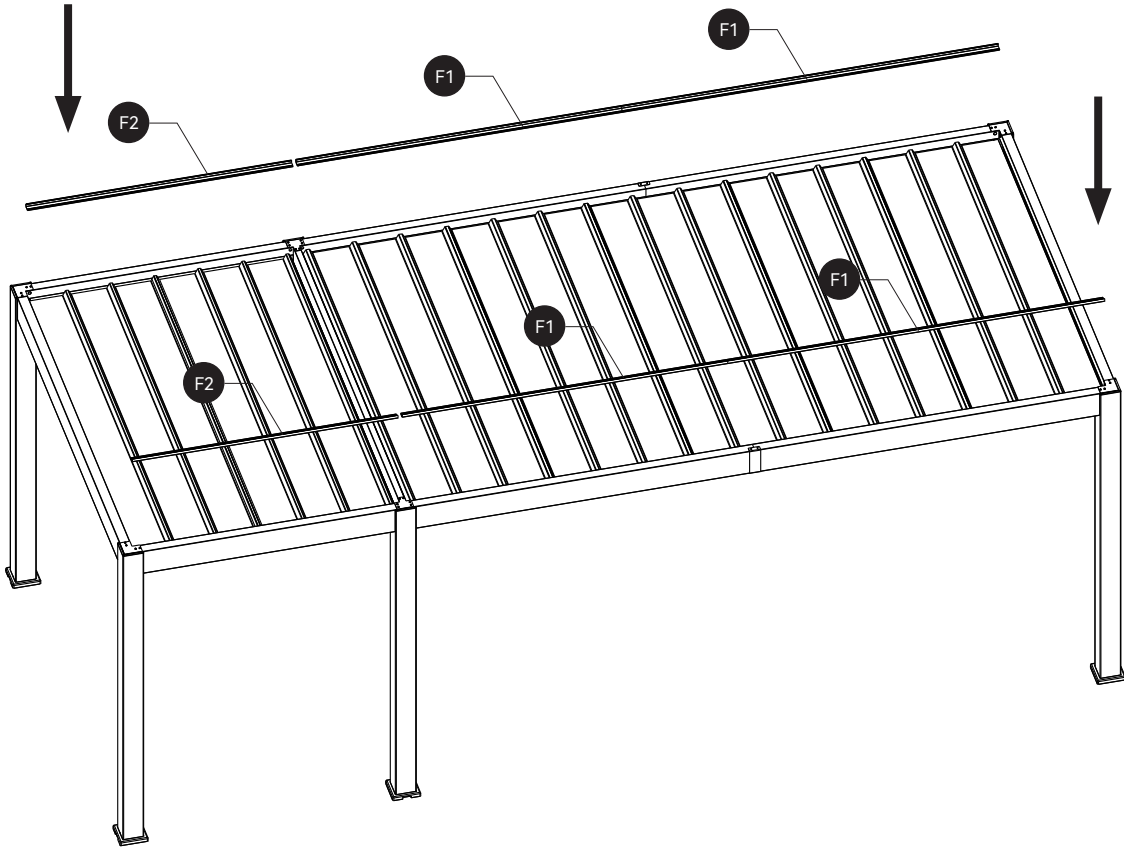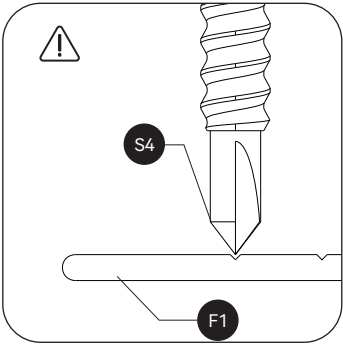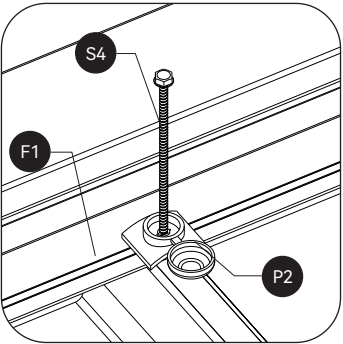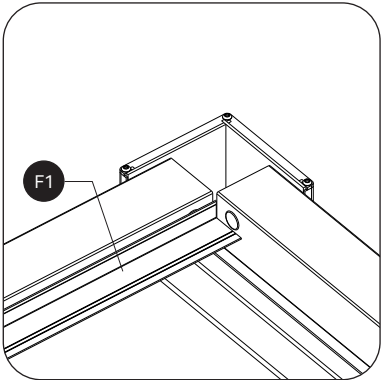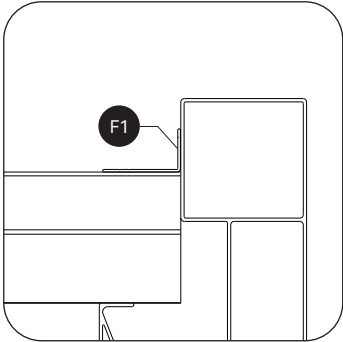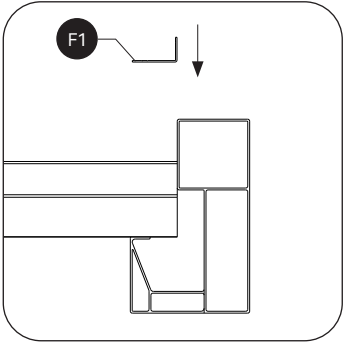




Combination A+B

S3	 5x19	15
P2		15

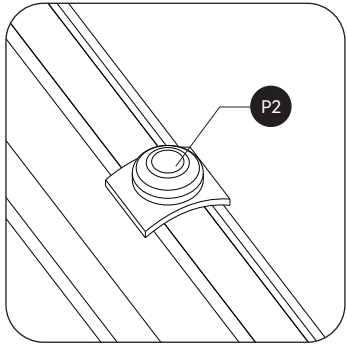
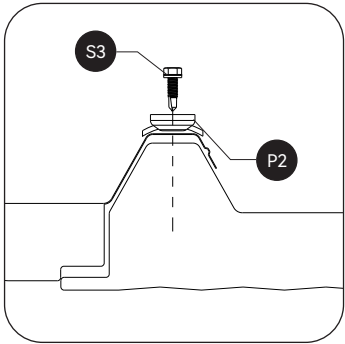
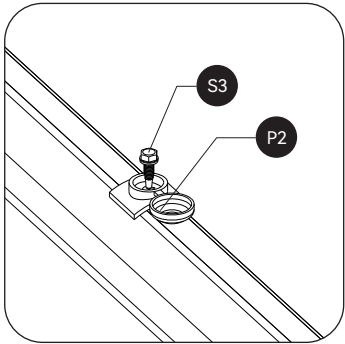
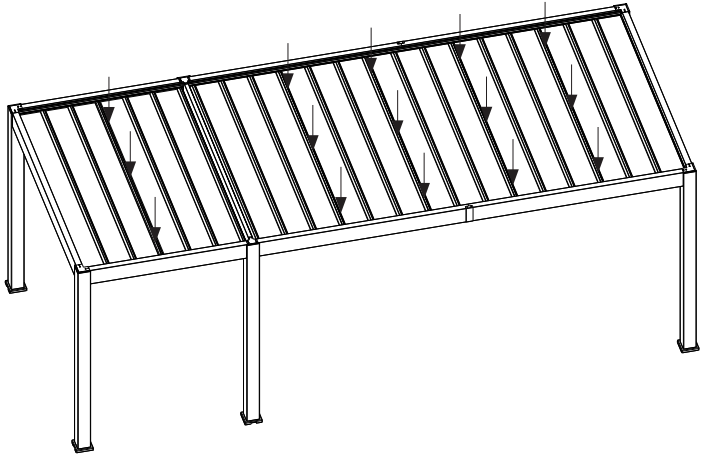


Combination A+B






S6		24
----	---	----

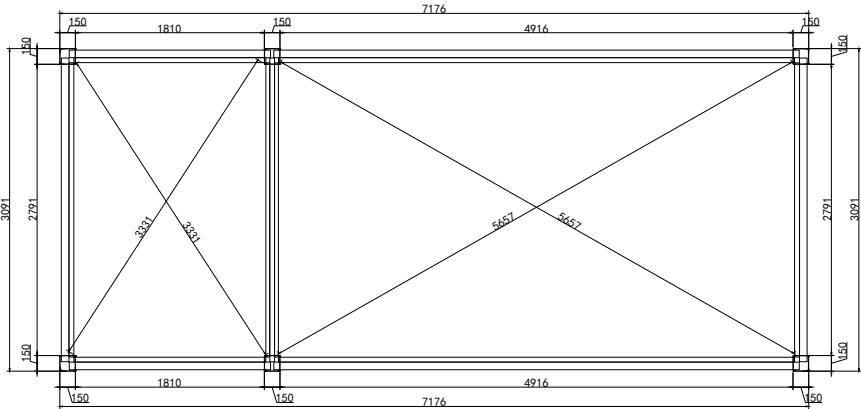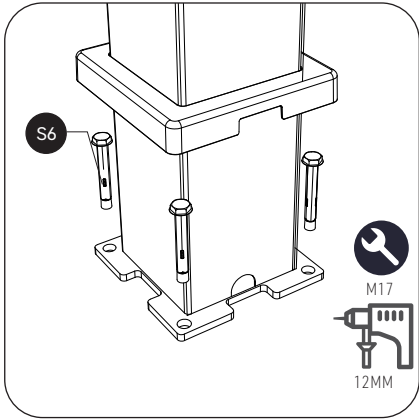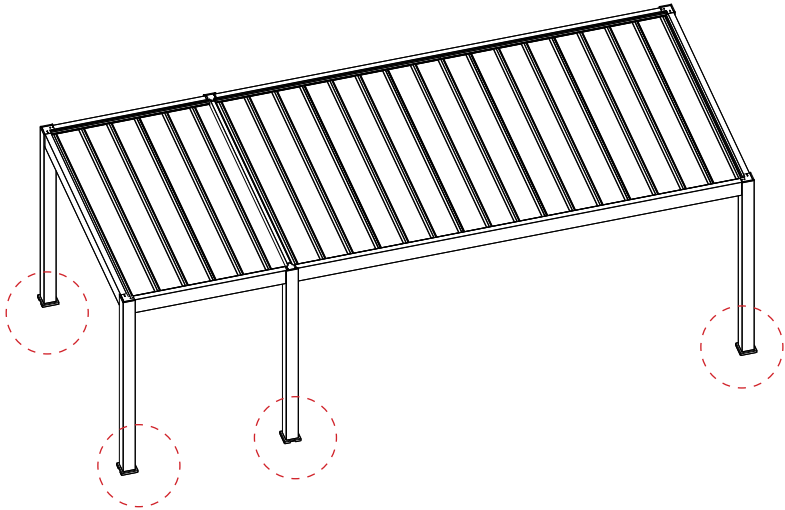

Combination A+B


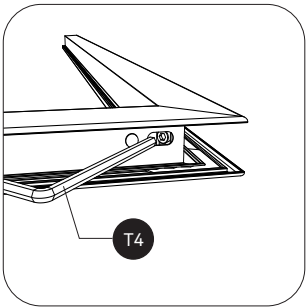
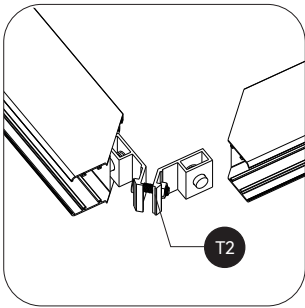
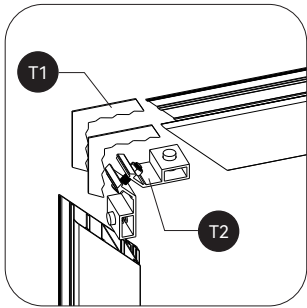
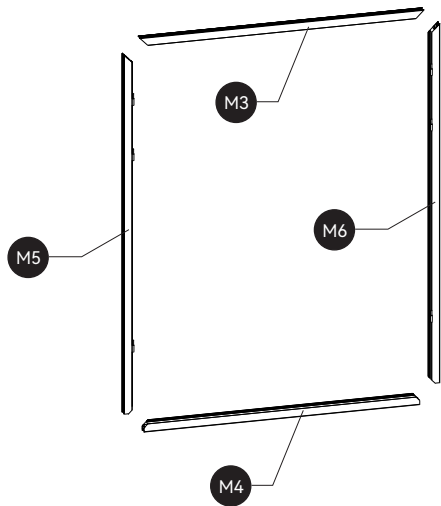


P1		12
S7	 4x60	12

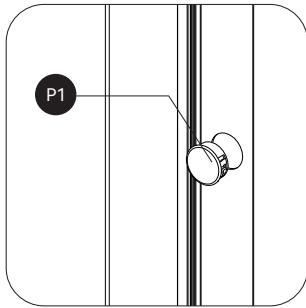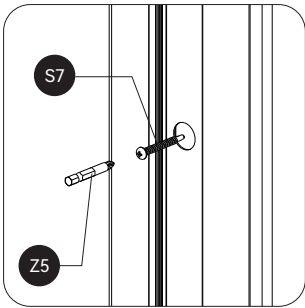
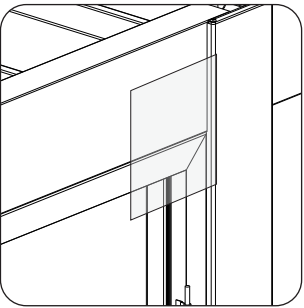
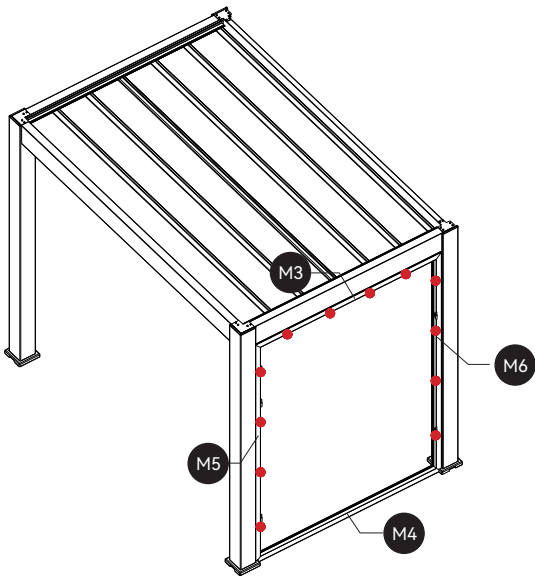
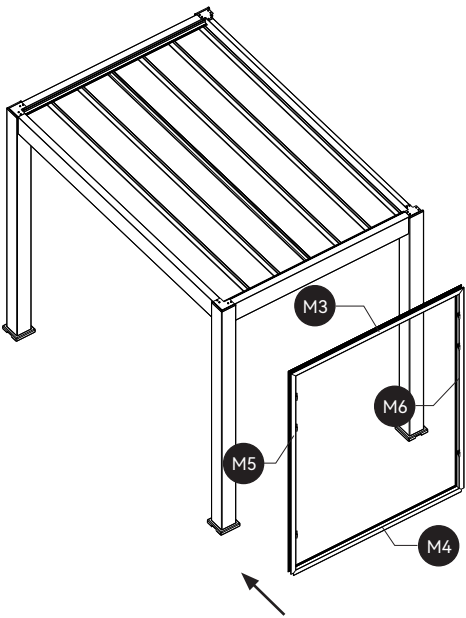


Combination A+B

P1		4
S8	 8x100	4




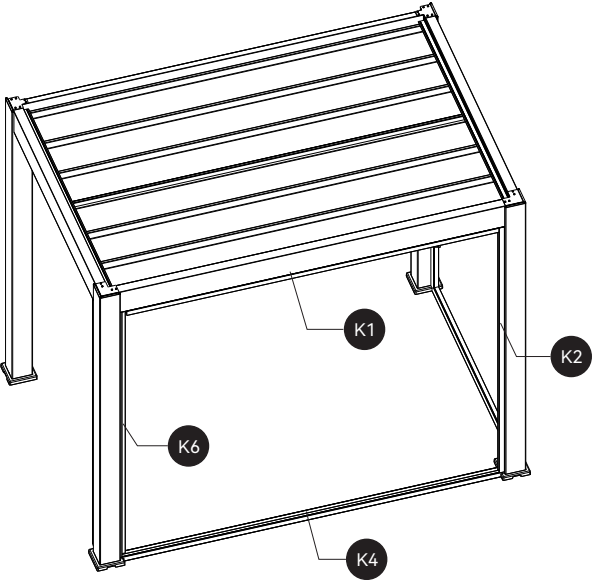
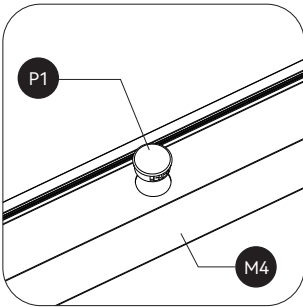
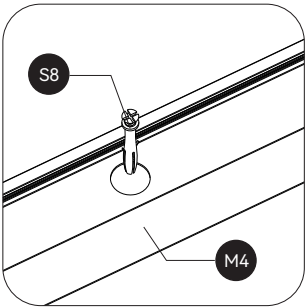
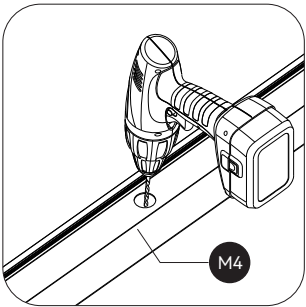
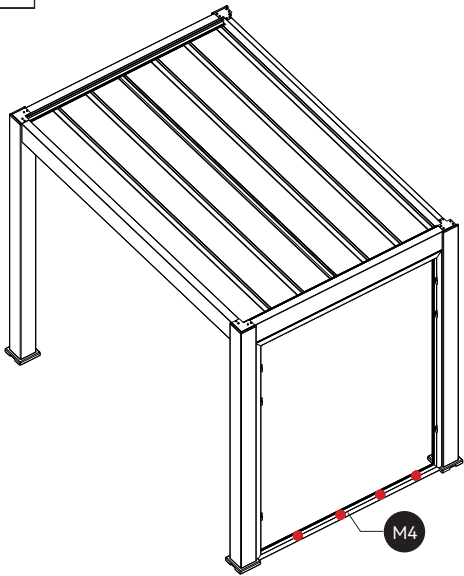


Install K2 and K4 first, taking care that K2 is flush with the outside of the beam.

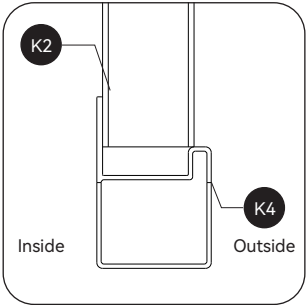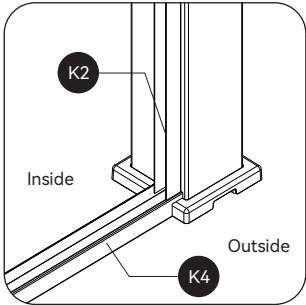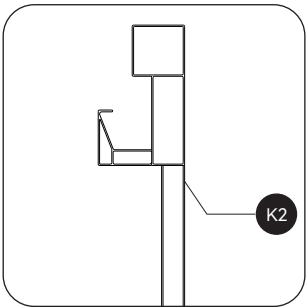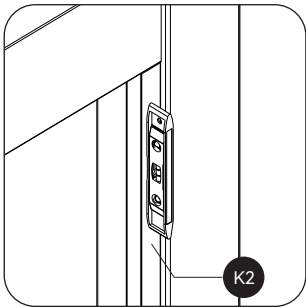




Combination A+B

S5	 4x16	12
S8	 8x100	4

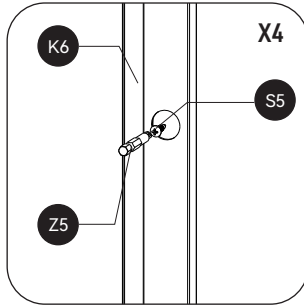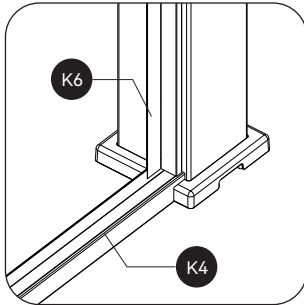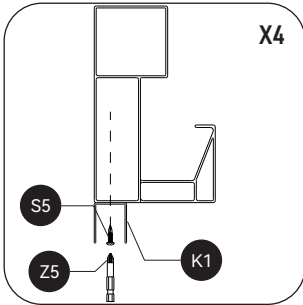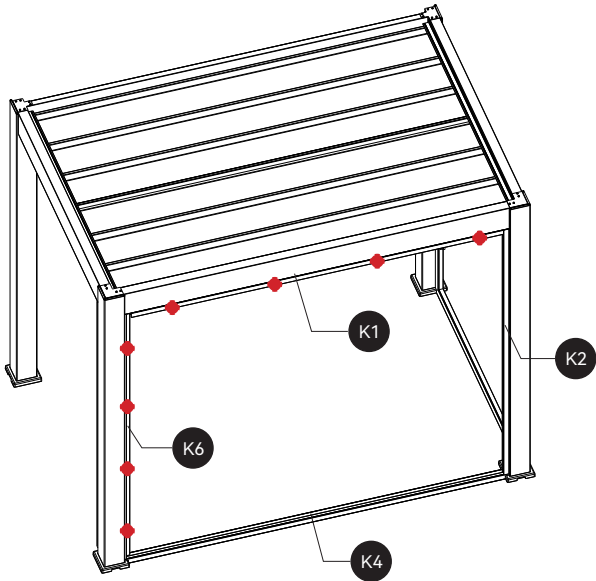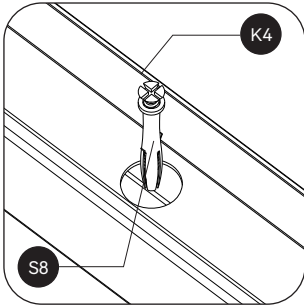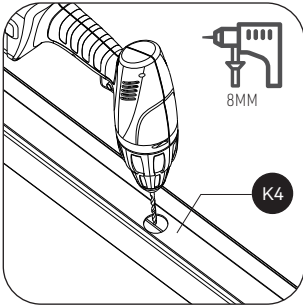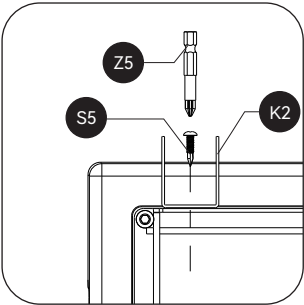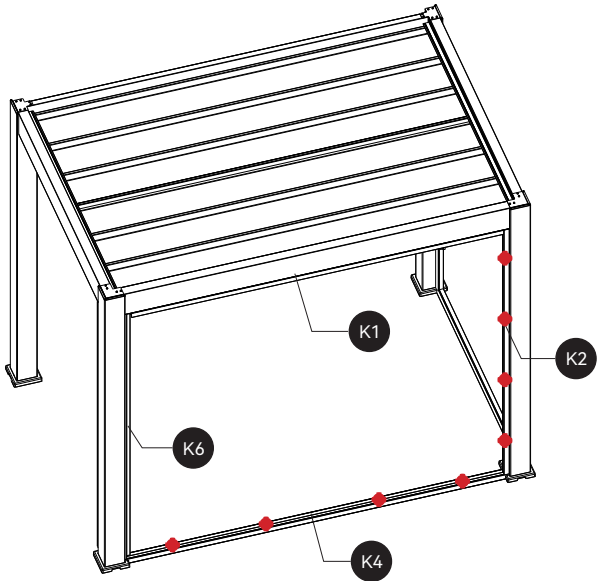


Combination A+B

Install the front mounting to complete the framing of the other two walls, need to pay attention to the location of the bottom beam to prevent screws from striking the gutters.






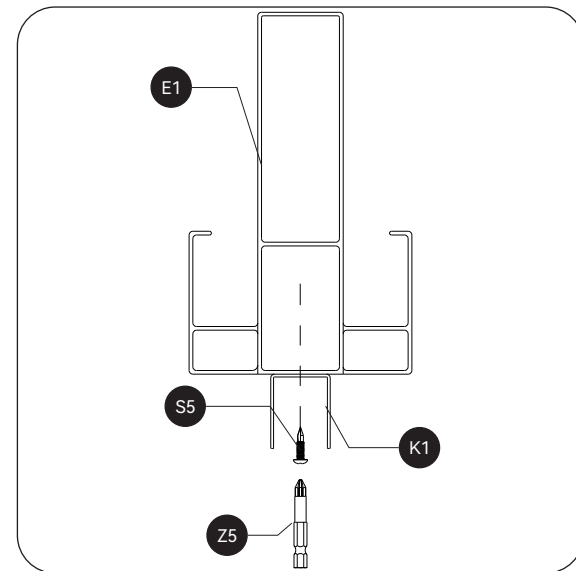
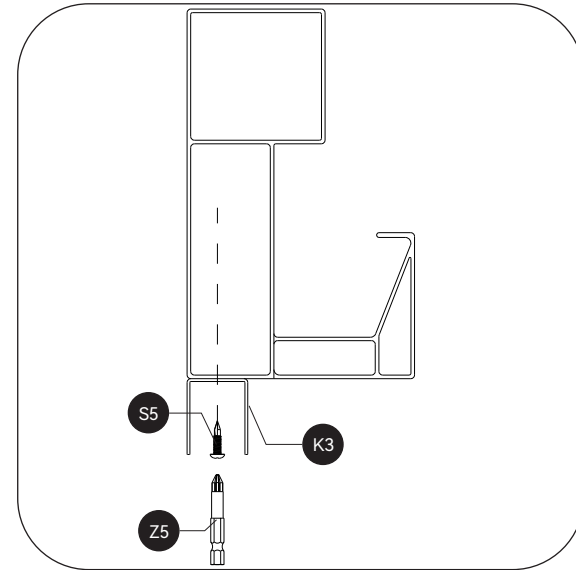
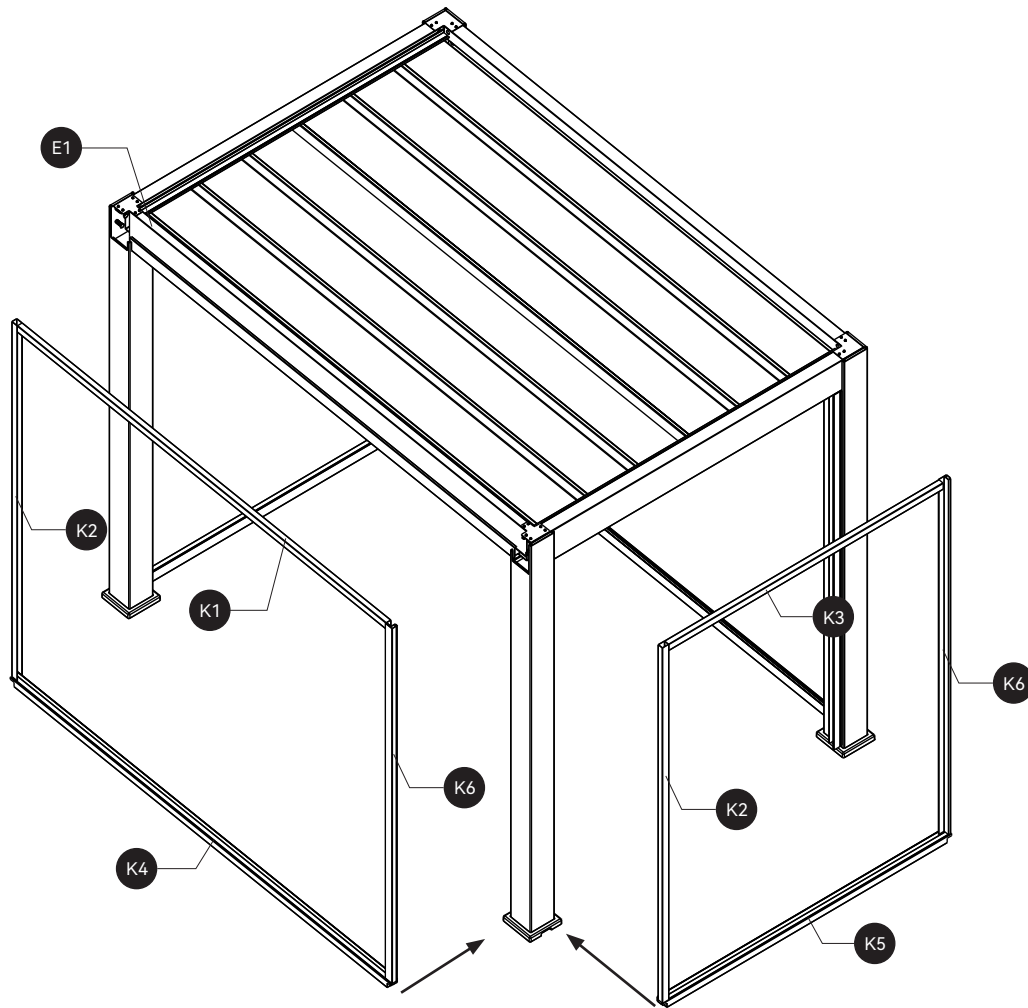



Combination A+B

S5	 4x16	12
----	---	----

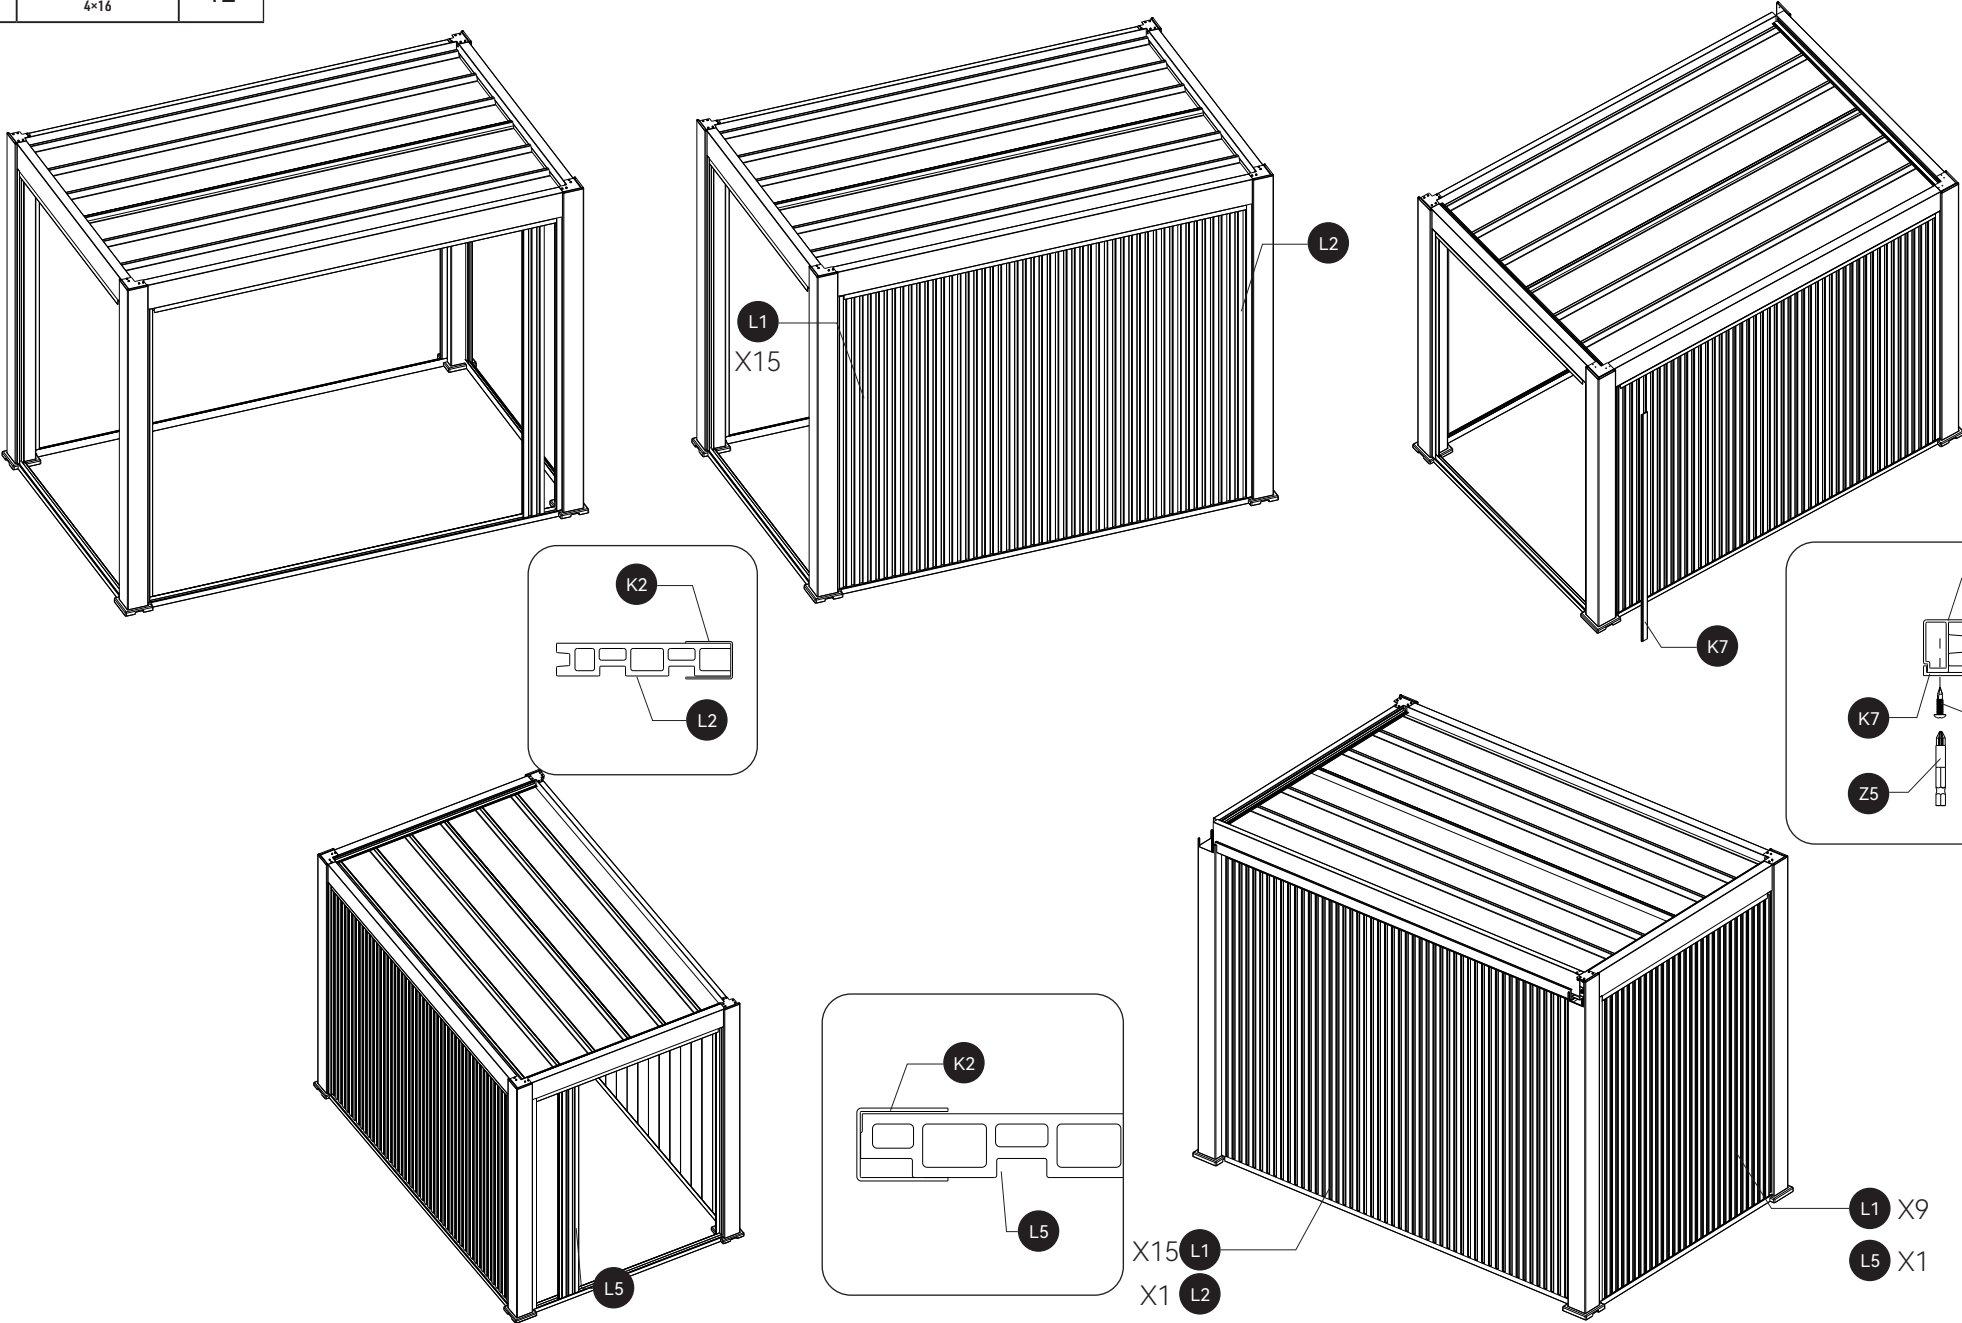

Combination A+B

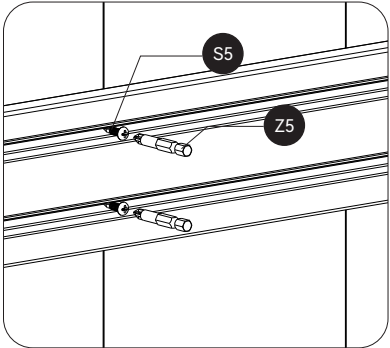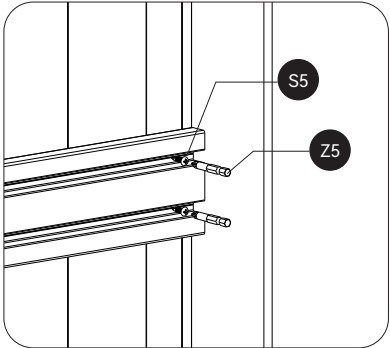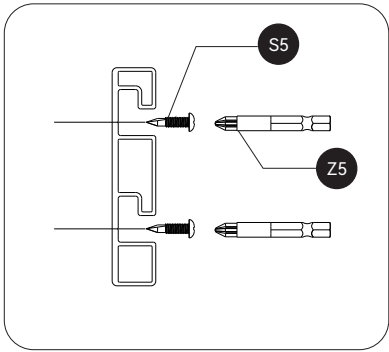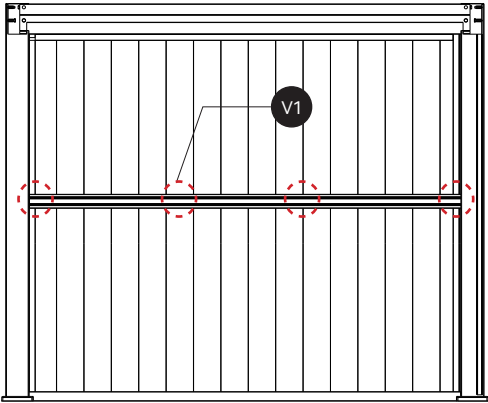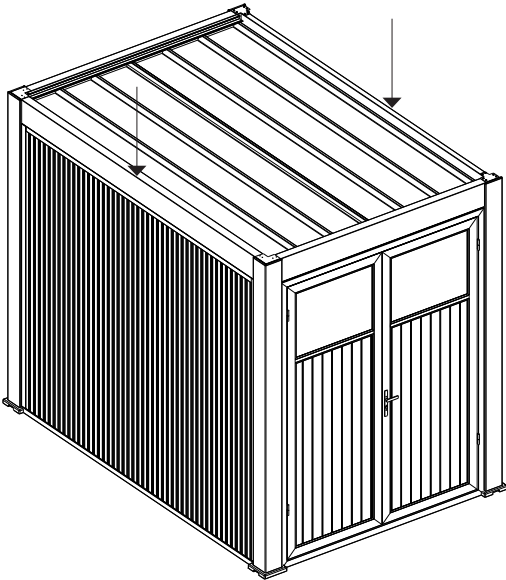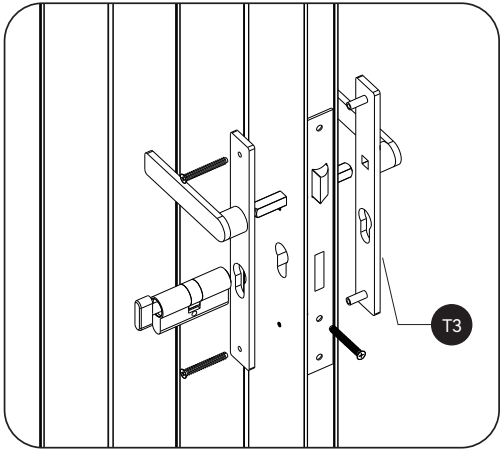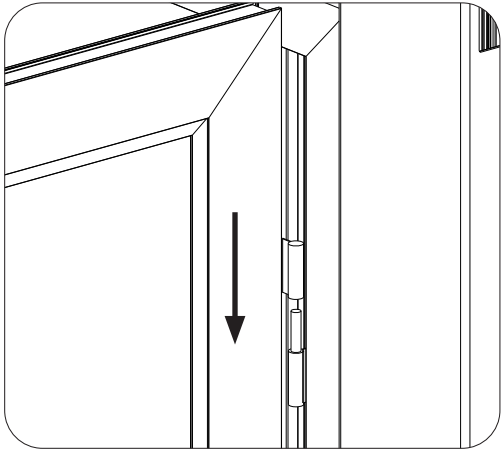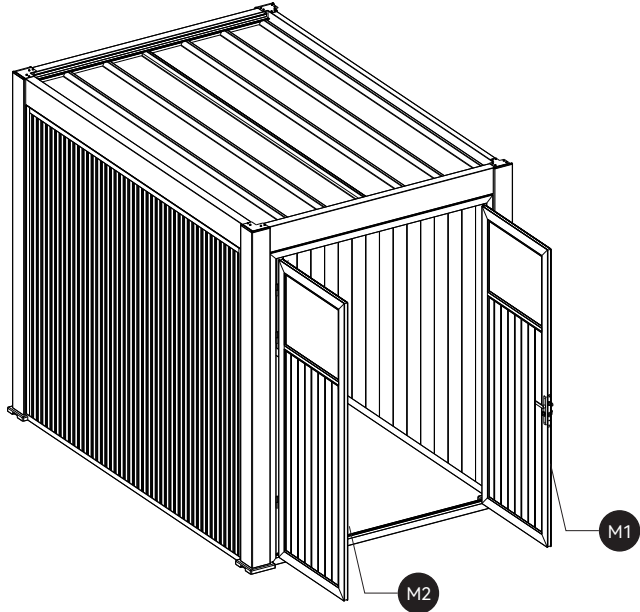

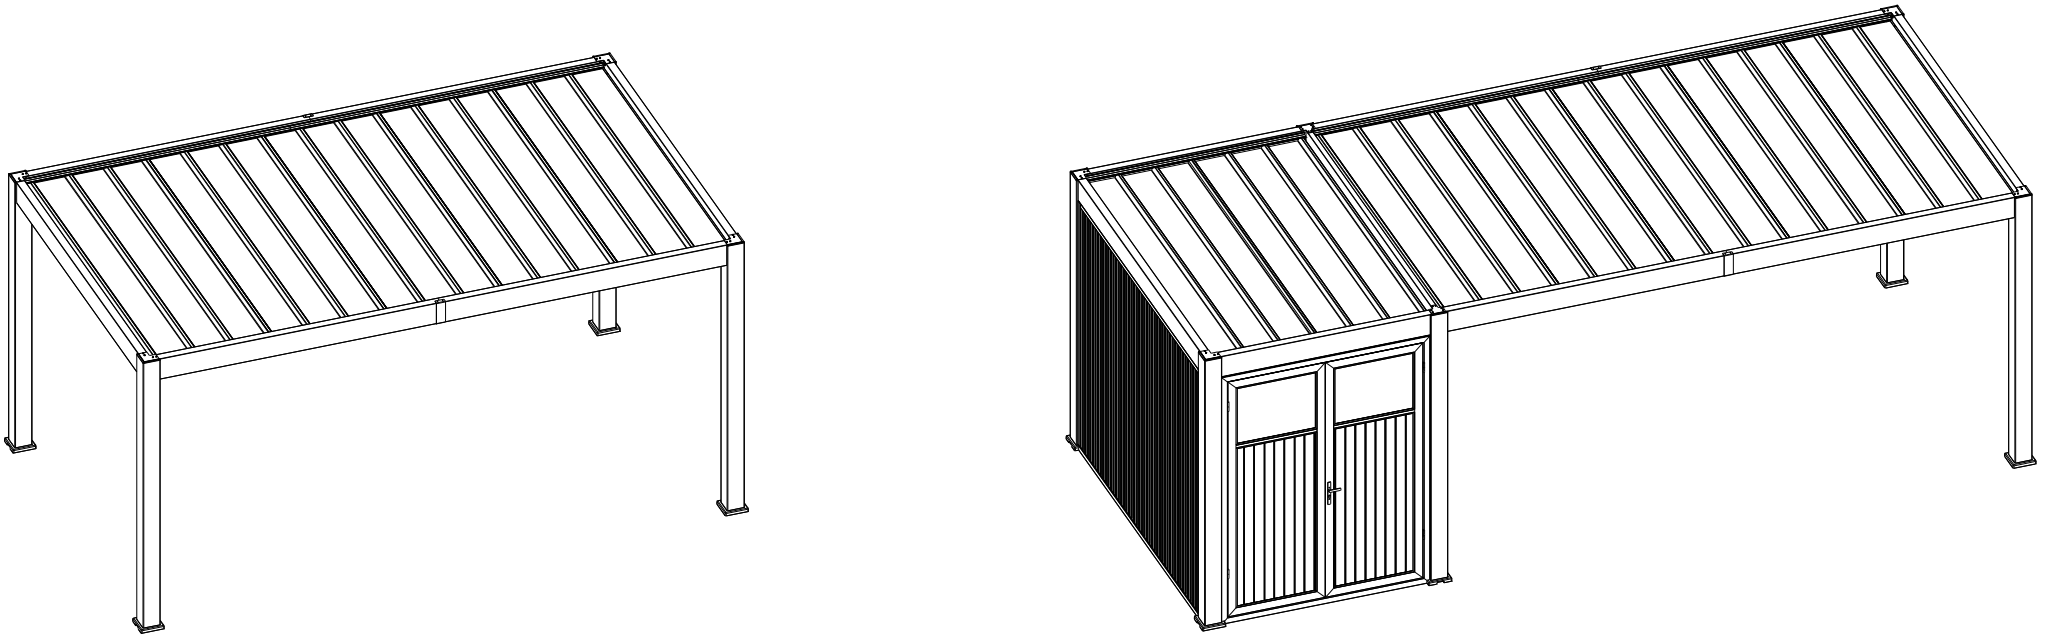

CARPORT + STORAGE